

This is a digital copy of a book that was preserved for generations on library shelves before it was carefully scanned by Google as part of a project to make the world's books discoverable online.

It has survived long enough for the copyright to expire and the book to enter the public domain. A public domain book is one that was never subject to copyright or whose legal copyright term has expired. Whether a book is in the public domain may vary country to country. Public domain books are our gateways to the past, representing a wealth of history, culture and knowledge that's often difficult to discover.

Marks, notations and other marginalia present in the original volume will appear in this file - a reminder of this book's long journey from the publisher to a library and finally to you.

## Usage guidelines

Google is proud to partner with libraries to digitize public domain materials and make them widely accessible. Public domain books belong to the public and we are merely their custodians. Nevertheless, this work is expensive, so in order to keep providing this resource, we have taken steps to prevent abuse by commercial parties, including placing technical restrictions on automated querying.

We also ask that you:

- + *Make non-commercial use of the files* We designed Google Book Search for use by individuals, and we request that you use these files for personal, non-commercial purposes.
- + Refrain from automated querying Do not send automated queries of any sort to Google's system: If you are conducting research on machine translation, optical character recognition or other areas where access to a large amount of text is helpful, please contact us. We encourage the use of public domain materials for these purposes and may be able to help.
- + *Maintain attribution* The Google "watermark" you see on each file is essential for informing people about this project and helping them find additional materials through Google Book Search. Please do not remove it.
- + *Keep it legal* Whatever your use, remember that you are responsible for ensuring that what you are doing is legal. Do not assume that just because we believe a book is in the public domain for users in the United States, that the work is also in the public domain for users in other countries. Whether a book is still in copyright varies from country to country, and we can't offer guidance on whether any specific use of any specific book is allowed. Please do not assume that a book's appearance in Google Book Search means it can be used in any manner anywhere in the world. Copyright infringement liability can be quite severe.

## **About Google Book Search**

Google's mission is to organize the world's information and to make it universally accessible and useful. Google Book Search helps readers discover the world's books while helping authors and publishers reach new audiences. You can search through the full text of this book on the web at http://books.google.com/

THE

# LOCOMOTIVE STEAM ENGINE

POPULARLY EXPLAINED.

SECOND EDITION,

## BY WILLIAM TEMPLETON.

WITH LITHOGRAPHIC ILLUSTRATIONS.

PRICE FOUR SHILLINGS.

MARKING THE PROPERTY OF THE PR

48.1733.



4

•

· .

.

48.1733.



. .

İ

•

•

:



# LOCOMOTIVE ENGINE.

## POPULARLY EXPLAINED,

AND ILLUSTRATED BY

## LITHOGRAPHIC DESIGNS;

TO WHICH ARE ADDED,

## RULES AND TABLES

FOR ASCERTAINING ITS AMOUNT OF USEFUL EFFECT, RESISTANCE, &c.

ALSO,

INTERESTING STATISTICAL PARTICULARS
CONNECTED WITH RAILWAYS,

FOR GENERAL INFORMATION

## BY WILLIAM TEMPLETON,

AUTHOR OF "THE MILLWRIGHT AND ENGINEER'S POCKET COMPANION I "ENGINEER'S COMMON-PLACE BOOK," &c.

SECOND EDITION,
REVISED BY AN EMINENT CIVIL ENGINEER.

## LONDON:

PUBLISHED BY SIMPKIN, MARSHALL, AND CO., STATIONERS' HALL-COURT; SOLD ALSO BY G. HERBERT, 88, CHEAP-IDE, LONDON; SMITH, ROGERSON, AND CO., LIVERPOOL; J. AND J. THOMSON, MANCHESTER; BLACK AND CO., EDINBURGH; AND BY ALL BOOK-SELLERS,

ENTERED AT STATIONERS' HALL.

## PREFACE.

It is a curious fact that, up to a very recent date, only one previous attempt at a popular description of the locomotive steam-engine has come before the public in the English language, and that by Mr. Stephenson, its celebrated improver. Unfortunately, however, that work has been published at an expense which renders it quite out of the reach of many who, probably, are the most anxious to acquire such information, and who might, by their mechanical skill and speculative minds, be the means of adding useful improvements to the machine, so that it should approximate nearer to a state of perfection, and be rendered essentially serviceable to the purposes for which it is required.

With a view to the partial removal of this defect, by rendering such information accessible to all classes of society, the present work is now offered to the public, being the result of several years' practice on a line of railway in the locomotive department, on which I had a constant opportunity of testing the merits and defects of the engines, and also the practical working of the line, so far as the engines were concerned.

In the selection of an engine whereby to make a design for illustration, I have found a most difficult task, engines having of late become so numerous, and each laying higher claim to public approbation than its predecessor. Having, however, had considerable practice with some made by Messrs. Kirtley and Co., of Warrington, which have given much satisfaction, I at last determined to select one of them, introducing various of Stephenson's late improvements, which I considered might be adopted with advantage.

The work also contains general information connected with railways, which, it is hoped, will be found, not only interesting, but extremely useful, it being the author's sincere desire to create, in the public mind, a feeling of investigation towards railways, so as to render that mode of conveyance ultimately both speedy and secure.

## ADVERTISEMENT.

In issuing a second edition of this work, the Publishers beg to state that it has been carefully revised by an eminent civil engineer, and such additions and alterations have been made as the lapse of time and advancement of science have rendered necessary; and now, in its improved form, they hope it will be found peculiarly useful to that class of persons for whom it is especially designed.

As regards the engine alluded to in the Author's Preface, the sectional part still appears for reference; but the Publishers have substituted a plate of a more recent one, by Messrs. Bury, Curtis, and Kennedy, of this town, as a frontispiece to the work, in lieu of that to the former edition.

Liverpool, March, 1848.

• • .

# CONTENTS.

PAGE	PAGE				
Adhesion of engines 48	King Leopold's decree for proving				
Alloys, fusible, for safety plugs in	steam-engine boilers106				
boilers 69	Lever, divisions of				
Atmosphere, resisting force of 60	Load an engine is qualified to take				
Atmospheric resistance on inclined	on different inclinations 49				
planes 61	Locomotion, improvement in 99				
Axle boxes	Locomotive engine, effect of 45				
Axles	Locomotive, effect of increasing				
Boilers, on the bursting of 70	the diameter of the wheels 58				
Boiler, locomotive, as divided 11	Mud holes, and how made up 16				
, external shell of the 11	Oil cups 89				
Blast Pipe	Pet cock 38				
Blow off cocks 16	Pipes, steam 20				
Chimney 26	Pistons 24				
Cylinders 23	Plug, leaden or fuseable 14				
" support of the 24	Preliminaries to the calculation of				
Dome 19	useful effect in locomotives 42				
Eccentrics	Pressure, effects of				
Fire box, the	Pumps 37				
" heating surface of 12	Qualifications and duties of loco-				
" width of 12	motive engineers, engine dri-				
Fire grate, and drop bars in do 13	vers, stokers, &c 72				
Fire door and doorway 15	Rails, gauge of 12				
Foot board 40	Railway Act, the new108				
Frame, external 27	Railways, remarks on the construc-				
Friction, diminution of, by rapid	tion of 81				
motion 91	" statistical data of 50				
Gauge cocks	" length of, in junction				
Glass gauge 15	with each other 56				
Guard plates 27	" employmentafforded by 98				
Hoops, their dimensions & quality 18	" narrow gauge faster				
Knees 27	than the broad 98				

# viii

PAGE	PAGE
Regulator, and means of moving 27	Table containing the square in
Resistance of loads, table of the 4	feet, area in inches, and area
Rods, piston and connecting 33	in feet of cylinders 80
<b>Safety</b> cocks 40	Table of Slopes 87
Safety valves	Table of railways, with the date of
Signals 75	opening, and gauge of rails 96
Slides, blocks, &c 84	Time and distance table 46
Smoke box and doors 23	Tires 31
Splash boards	Tube plate, front
<b>Split pins 39</b>	Tubes, holes for the
Springs	" dimensions and quality of 17
Stays, the 13	" use and insertion of 18
Stays, longitudinal	" heating surface in the 18
Steam ways	Valves, safety, and effects of the
Steam, table of the properties of 10	lever and spring balance on 21
" useful effects of 10	Valve, calculations connected with
" application of, and its pro-	safety, and area of 22
duction in locomotives 11	Valves, lap, motion, and lead of 25
" production of 68	Water, its boiling point 9
" elastic force of 63	Water spaces 12
" space which it occupies 64	Weight of engine and tender 40
" reduction of 65	Wheels 80
" various properties of 66	" adhesion of
Tables of particular utility in me-	" circumference of 59
chanical calculations 77	" revolutions of various dia-
Table of the estimate and cost of	meters of, to retain equal
railways 85	velocities 59

## POPULAR AND SCIENTIFIC DESCRIPTION

OF A

## LOCOMOTIVE ENGINE.

LOCOMOTIVE ENGINES are machines chiefly employed upon railways, for the purpose of conveying carriages with goods and passengers, by the propelling power of steam,—steam being water combined with caloric, or the matter of heat.

## WATER: ITS BOILING POINT.

Water, under common circumstances of pressure, will imbibe caloric until it attains a temperature of 212° Fahrenheit, at which point ebullition and evaporation take place. The water is changed from a fluid to an aëriform state, or steam, equal to the pressure of the atmosphere, namely, from 14 to 15 lbs. per square inch.

### EFFECTS OF PRESSURE.

If the water be inclosed in a proper vessel or boiler, and the pressure augmented by any artificial means, such as a safety valve, &c., ebullition will not take place at 212° Faht., but somewhere above that point, proportionate to the pressure on the valve; and, as the temperature of the water is elevated, so is the density of the vapour increased, but in a very superior ratio. Hence, to produce steam of double or triple the pressure, double or triple the temperature is not required, but by experiment is found to be as exhibited in the following table:—

TABLE OF THE PROPERTIES OF STEAM, EXPRESSED IN VARIOUS TERMS.

Lbs. per square inch above the atmosphere.	Temperature in degrees of Fahrenheit.	Volume of Steam, water being I.	Cubic inches of water in a cubic foot of steam.	Elastic force in inches of mercury.	Lbs. per square inch above the atmosphere.	Temperature in degrees of Fahrenheit.	Volume of steam, water being 1.	Cubic inches of water in a cubic foot of steam.	Elastic force in inches of mercury.
2.5	2200	1496	1.14	5.15	30	2750	609	2.81	61.8
8	222	1453	1.18	6.18	85	282	553	3.09	72.1
4	225	1366	1.25	8.24	40	288	506	3.38	82.4
5	228	1282	1.33	10.3	45	294	468	3.66	92.7
10	240	1044	1.64	20.6	50	299	435	3.93	103.0
15	251	883	1.93	30.9	55	304	407	-4.20	113 3
10 15 20	260	767	2.23	41.2	60	309	382	4.48	123.6
25	268	678	2.52	51,5	1				1

## USEFUL EFFECTS OF STEAM.

It is chiefly owing to the preceding properties of steam that locomotives are rendered so effectively useful on railways. It is also owing to those properties that steam vessels have, of late, been enabled to traverse thousands of miles on the trackless ocean to visit other countries, the accomplishment of which was, a few years back, but rarely anticipated.

# APPLICATION OF STEAM, AND ITS PRODUCTION IN LOCOMOTIVES.

Steam is made available for the production of motive power in two different ways; first, by force or pressure, and secondly, by condensation. But, in the high-pressure, or locomotive application, force is the entire principle. The machine is so constructed that motion is produced by the propelling force of the steam, which is afterwards allowed to escape into the atmosphere by the chimney: its superior force expels the air, and causes an artificial current of heated air to pass through the water in the boiler by means of a number of brass tubes, which thereby render the boiler sufficiently competent for generating the required quantity of steam.

## LOCOMOTIVE BOILER AS DIVIDED.

The boiler is the most extensive portion of a locomotive engine, and consists of three separate compartments or distinct divisions; namely, the fire-box end, or back end A, in which the body of fire is contained; the middle or cylindrical part B, in which the tubes are contained; and the smoke box, or front end C, in which the cylinders, valves, and blast pipe are contained, and also on which the chimney D is placed.

## EXTERNAL SHELL OF THE BOILER.

The external shell of the boiler is of wrought iron plates  $\frac{3}{8}$ ths of an inch in thickness, and rivetted together with rivets  $\frac{11}{16}$ ths of an inch diameter, and about  $1\frac{7}{8}$  inches from centre to centre of each; the corners are united by angle iron  $2\frac{1}{2}$  inches in breadth, or the outer plates are bent to lap over each other, and rivetted together in a similar manner.

#### THE FIRE BOX.

The fire-box end is composed of a double casing, the internal of which is properly designated the fire box, and is of copper plates,  $\frac{5}{8}$ ths of an inch in thickness, except that part of the front or tube plate in which the tubes are inserted, which is from  $\frac{3}{4}$ ths to  $\frac{7}{8}$ ths.

### WATER SPACES.

Surrounding the fire box, and inclosed by the external shell, are water spaces, W W W W, of which those on the sides and back are about 3 inches in width; the space on the front side requires to be a little wider, say about  $3\frac{1}{2}$ , on account of the blast pipe causing the action of the fire to be greatest on that side.

## GAUGE OF RAILS, &c.: WIDTH OF FIRE BOX.

In engines of 4 feet  $8\frac{1}{2}$  inches gauge, being the usual gauge of rails in this country, the external shell of the fire box cannot well exceed 4 feet 3 inches in width across the engine, and for any other gauge of rails the same in proportion, consequently 4 feet 3 inches, minus the thickness of plates and width of water spaces, equal about 3 feet  $7\frac{1}{2}$  inches for the width of the fire box.

## HEATING SURFACE OF FIRE BOX.

To proportion for the quantity of heating surface in the fire box:

Rule.—Multiply the cubic contents of one cylinder in inches by 027, the product is the extent in square feet. Hence, divide that surface, minus the area of front and back plates, by twice the height, plus the

width of the fire box, and the quotient is the length in the direction of the boiler.

**EXAMPLE.**—Suppose cylinders of 12 inches diameter, strokes 18, width of fire box 3 feet  $7\frac{1}{2}$  inches, and height 3 feet 8 inches, required the whole extent of area in the fire box, and its length in the direction of the boiler.

- $12^2 \times .7854 \times 18 \times .027 = 54.96$  square feet of surface.
- 3 ft. 8 in.  $\times$  3 ft.  $7\frac{1}{2}$  in.  $\times$  2 = 26.5 square feet in front and back plates.
- And 3 ft. 8 in.  $\times$  2 + 3 ft.  $7\frac{1}{2}$  in. = 10 feet  $11\frac{1}{2}$  inches, or 10,958 feet, length of sides and top included.
- Hence,  $\frac{54.96 26.5}{10.958}$  = 2.59 feet, or about 2 feet 7 inches in the direction of the boiler.

#### THE STAYS.

The stays, s s s s, &c. are generally made of copper  $\frac{7}{8}$ ths of an inch in diameter, and about 4 inches apart, centre and centre, which pass through the water spaces, screwed into each plate, and rivetted, being for the purpose of rendering the flat surfaces of the fire box capable of withstanding the force of the steam. For the same purpose, the bars, b b, &c. are rivetted to the top of the fire box, resting upon rings about one inch in depth, so as to allow a free circulation of the water between each bar and the plate.

## FIRE GRATE, AND DROP BARS IN FIRE GRATE.

The bottom of the fire box is about 20 inches from the top of the rails, and made up with wrought iron

bars, 6 inches higher up, a a a, &c., which are laid in the direction of the boiler, and constitute the fire grate; they are about  $2\frac{1}{2}$  inches in depth, the top edge 1 inch in thickness, bottom edge  $\frac{1}{2}$  an inch, and about 1 inch Four bars in the middle ought to be united together at each end, which rest upon the catch c, so that when the fire requires to be speedily removed the catch is withdrawn, and the four bars instantly drop, and along with them a great portion of the fire; otherwise, if the removal of a bar or bars is to be effected by the fire door, and especially when an indifferent quality of coke has been in for some length of time, it becomes clinkered together, and before it is possible to get one bar out, the whole of the water may be evaporated from off the top of the fire box, the leaden plug become melted, and perhaps two or three rows of tubes destroyed.

## LEADEN OR FUSEABLE PLUG.

To render a leaden or fuseable plug of any essential service in such emergencies, it ought to be inserted into a tube attached to the top of the fire box, at least  $1\frac{1}{2}$  inches in height above the plate, because the plug will not melt until the water is entirely evaporated from around it; and very probably before it is melted the tubes are burned. And again, I have seen in such a case the steam so highly rarified, previous to the plugs being melted, as to ignite the moment it came in contact with the fire, to the great danger of those who were near to the engine at the time, besides setting on fire and destroying the casing of the boiler.

Fuseable plugs for locomotive boilers ought to be composed of two parts lead and three parts tin, which melt at a temperature of 334° Faht.

### THE FIRE DOOR AND DOORWAY.

The door, or doorway e, is an opening into the fire box, through the back end of the boiler; its length across the engine is about 13 inches, width 9, and 81 inches above the foot plate; semicircular at each end, and closed by a door of a similar form, attached to the boiler by hinges. The door is composed of two iron plates, about 1 inch apart, and rivetted together, so as to prevent the external plate becoming red hot by the action of the fire. This opening to the fire box is indispensably necessary, -1st, For the admission of coke in supplying the fire; 2ndly, For the introduction of a rod, to extract small pieces of coke which frequently stick fast in the ends of the tubes; and, 3rdly, For the insertion of plugs into the ends of the tubes, when they at any time become leaky, or chance to burst.

## THE GLASS GAUGE.

The glass gauge G is an indicator generally attached to the back of the fire box, for the purpose of ascertaining, as nearly as possible, the height of the water in the boiler, and consists of two small cocks, with proper receptacles for a glass tube; the tube is about 12 inches long and 5ths diameter; 10 inches of its length is exposed to view, and so situated on the boiler that the bottom of the glass is level with the top of the fire box. Particular attention requires to be paid to the glass gauge, for various reasons: namely, the openings through the cocks to the boiler may get stopped up; the water in the tube sometimes becomes frothy, and no solid water indicated; also, if the regulator be suddenly opened in starting the engine, the water will rush up the tube, and remain quite full for some

considerable length of time; and the only real test or prevention in such cases is to partially shut the cocks from the boiler, renew the water in the tube, or partially open the fire door for a short space of time.

## GAUGE COCKS.

Gauge cocks, as they are commonly termed, are two, sometimes three, small cocks inserted on one side of the fire box at c, and used as a check to the glass gauge. They are frequently screwed into the boiler, the bottom cock being about 1 inch above the top of the fire box. When only two are inserted, they are placed 4 inches apart; if three, 3 inches apart.

#### THE BLOW OFF COCKS.

The blow off cocks k k are  $1\frac{1}{3}$  inches bore, and situated at the bottom of the water space in the back end of the boiler, for the purpose of emptying the boiler of water by the force of the steam, through which it is violently ejected, carrying along with it foreign matter held in solution, and other light substances that may be deposited at the bottom of the fire box. They are sometimes placed on the sides of the fire box, and immediately over the rails, but on account of the almost impossibility of keeping them tight, a constant dropping of water upon the rails is the consequence, thereby rendering it of frequent inconvenience to engines following, by causing them to lose their adhesion, and slip upon the rails.

## THE MUD HOLES, AND HOW MADE UP.

The mud holes m m are circular openings, about  $1\frac{1}{2}$  inches in diameter, at the bottom of the water spaces into each corner of the fire box, and made up either by cir-

cular covers, held to their places by T heated bolts, or the plate tapped and screw plugs inserted. These holes are for the purpose of removing the sediment and scale that constantly accumulate at the bottom of the water spaces, and also for the purpose of introducing a jet of water, so as to prevent any accumulation of dirt or scale among the stays, which, if not frequently attended to, soon becomes in such a state as not to be easily removed.

## THE FRONT TUBE PLATE.

The front tube plate P, or that into which the tubes are inserted in the fore end of the boiler, is of rolled iron, about  $\frac{5}{8}$ ths of an inch in thickness; this plate forms the fore end of the cylindrical part of the boiler, also the back of the smoke box, and attached to each by  $2\frac{1}{2}$  inch angle iron.

## THE HOLES FOR THE TUBES.

The holes for the tubes are bored out perfectly round, and as nearly as possible their outside diameter; the distance between each hole is from  $\frac{5}{8}$ ths to  $\frac{3}{4}$ ths of an inch, and the top of the highest tube not exceeding the centre of the holler.

## DIMENSIONS AND QUALITY OF THE TUBES.

Tubes vary in size in common use, from  $1\frac{5}{8}$  to 2 inches outside diameter, the smaller being most applicable to engines for passenger trains, or engines where a great quantity of heating surface is required, and the larger for luggage engines that have to transmit a greater load at a less velocity: they now vary in length from 8 to 10 feet, and for Messrs. Stephenson's design they reach 13 feet in length.

t.

## THE USE AND INSERTION OF THE TUBES.

The tubes are for the purpose of communication between the fire box and the chimney, and also for the distribution of caloric to the water in which they are immersed. The best tubes now in use are of brass, cast and drawn without soldering; they are drawn thicker for the fire-box end, being No. 8 wire gauge, and No. 14 at smoke-box end; they are tested to 300 lbs. internal pressure. After they are fitted to their proper places in the boiler, they are rivetted or turned over the plates a little at each end, so as to prevent the hoops, when in the action of being driven, taking the tubes along with them.

## THE HOOPS AND THEIR DIMENSIONS.

The hoops are  $1\frac{1}{4}$  inches in breadth and  $\frac{1}{8}$  in thickness, having their external diameter turned slightly conical, and a little larger than the internal diameter of the tubes, so that when they are driven into the tubes they may cause them to expand so as to bring their external diameter so closely in contact with the internal diameters of the holes as to render them water tight.

## QUALITY OF HOOPS.

The hoops for the fire-box end are of steel, and for the smoke-box end of iron, steel being found in practice to withstand the action of the coke much better than iron, and nearly in the same proportion as brass tubes to copper tubes—namely, brass in preference to copper nearly as 6 to 1.

#### MEATING SURFACE IN THE TUBES.

The proportion of heating surface in the tubes is about ten times the quantity in the fire box; hence, when the quantity of heating surface is known, and the diameter and length of tubes determined, the number is easily ascertained.

EXAMPLE.—Suppose the heating surface in the fire box 50.85 square feet, the length of the tubes 8 feet, and internal diameter 1\frac{1}{3} inches, required the number.

 $1\frac{1}{3}$  × 3.1416 = 4.71 inches, circumference of each tube.

 $50.85 \times 7 = 355.95 \div 8 = 44.49 \times 12 = 533.88$  inches, the whole circumference of the tubes. And  $533.88 \div 4.71 = 113$  tubes.

### LONGITUDINAL STAYS.

The stays S S are three or more round iron bars, about  $1\frac{1}{8}$  inches diameter, and extending from the back extremity of the boiler, through the front tube plate inside the smoke box; they are screwed into each plate so as to render them completely tight, and are for the sole purpose of support to the ends of the boiler against the force of the steam.

#### THE DOME.

The steam dome M is a cylinder of wrought iron, about 14 inches diameter, 2 feet in height, and placed in some engines immediately behind the chimney, on the body part of the boiler; it is for the purpose of admitting the steam to the cylinders at a greater height above the surface of the water in the boiler; it is also, when so placed, a means of ready admission to the regulator, being the only article generally that requires the interior of the boiler to be exposed.

## STEAM PIPES, &c.

The steam pipe N is 4 or  $4\frac{1}{2}$  inches diameter, made of copper one-sixteenth of an inch in thickness. The steam is conducted to the regulator by this pipe, and thence to outside the front tube plate and interior of the smoke box, where it diverges, and  $3\frac{1}{2}$  inch pipes attached, by which the steam is conducted to the valve boxes, B B. The top of the pipe in the dome is in form of a funnel, in order to prevent, as much as possible, any particles of water arising with the steam getting into the steam pipe, and thereby passing into the cylinders, generally known by the term priming, and is not only very unpleasant, but extremely detrimental to the engine. Priming is much less liable to take place when pure soft water can be obtained, and by keeping the boiler properly clean.

## THE REGULATOR.

The regulator R might be conceived to be an obstruction in the steam pipe, and consists of two flat circular disks d d, ground face to face until they are rendered perfectly steam tight. Into each plate are two or three openings exactly opposite to each other, so that, by one disk remaining stationary, and the other being moved a fourth or sixth of a circle, the openings are brought opposite to each other, or otherwise, as required; consequently, by this means the steam can be completely shut off, or partially shut off, and the velocity of the engine easily regulated at pleasure.

## MEANS BY WHICH THE REGULATOR IS MOVED.

Connected with the regulator, and for the sake of convenience, the rod r is continued from the back of

the moveable disk d to the back of the fire box, on which is fixed the lever L, and by which the change of the regulator is effected. The stationary disk is usually of cast iron, the moveable of brass, and each about 10 inches diameter.

### SAFETY VALVES.

To regulate the density, and also to protect the boiler against unnecessary accumulation of steam, two safety valves are attached of  $2\frac{1}{2}$  inches diameter each at the narrowest part; one is placed upon the dome M, and the other any where convenient to the engineer, so that he may have it in his power to lessen the regular pressure, namely, 70 to 80 lbs. per square inch, at any time the engine is about to be lessened in effect; and it should always be attended to when the engine is stopped for any length of time.

# EFFECTS OF THE LEVER AND SPRING BALANCE ON THE SAFETY VALVE.

Upon each valve is placed a lever l l, and at the end of each lever a spring balance t t, fixed to the boiler. Hence, in calculating the effect or pressure on the valve, the action of the lever and spring balance must be taken into account, which is easily ascertained by the following simple means:—Disengage the spring balance from the boiler, and attach another to the lever immediately above the centre of the safety valve, which will indicate the number of pounds to be distributed on each square inch of the valve.

## DIVISIONS OF THE LEVER.

Sometimes, for the sake of ready calculation, the valve levers are so divided that the distance from the fulcrum L'me.

to the valve equals the diameter of the valve, and the distance from the fulcrum to the spring balance as many times the diameter of the valve as there are square inches in its area, consequently the pressure upon the valve per square inch is always indicated by the spring balance, plus the action of the lever.

## CALCULATIONS CONNECTED WITH THE SAFETY VALVE.

When levers so applied are not thus proportioned, the effect of the lever requires also to be taken into account:—For example, suppose a lever 30 inches in length, distance from the fulcrum to the valve  $2\frac{1}{2}$  inches, area of the valve 4.9 inches, and the action of the lever and spring balance equal 16 lbs. upon the valve, what will the spring balance indicate when steam is at a pressure of 50 lbs. per square inch above the pressure of the atmosphere?

 $\frac{30}{25}$  = 12, or the effect of the lever; and

4.9 = the area af the valve in square inches.

× 50 lbs. pressure per square inch.

245 = the whole pressure upon the valve.

- 16 lbs. action of the lever and spring balance.

12) 229 (19.08 lbs. indicated by the spring balance.

## THE AREA OF THE VALVE.

To find the area, or number of square inches in a valve.

Rule.—Multiply the square of the diameter by .7854 and the product is the area,—thus,  $2.5^2 = 6.25 \times .7854 = 4.9087$  the area.

### THE SMOKE BOX.

The shell of the smoke box is of wrought iron plates,  $\frac{1}{2}$ th of an inch in thickness, unless the front plate, which is generally  $\frac{3}{6}$ ths; the angle iron for uniting the corners 2 inches in breadth; the rivets  $\frac{1}{2}$  inch diameter, and  $1\frac{1}{2}$  from centre to centre of each. Some makers attach the front plate to the angle iron by  $\frac{3}{8}$ th bolts, for the purpose of being more easily removed, and prevent shaking to pieces any other part of the smoke box, in case of general repair, &c.

## DOORS OF THE SMOKE BOX.

In the front of the smoke box is a door-way, just sufficient in size to clear the ends of all the tubes, so that a rod may be easily introduced to clean the tubes, or the tubes easily replaced when required. The opening is made up by a door or doors, and attached to the front plate by hinges, so as to admit of ready access, and also to render the smoke box as tight as possible, so that the tubes may be completely inclosed, and the current of heated air be allowed to pass unobstructed from the fire to the chimney.

## THE CYLINDERS.

The cylinders g g, are situated at the bottom of the smoke box, and attached to the front tube plate P by five bolts  $\frac{7}{8}$ ths of an inch in diameter, the centre of each cylinder being placed in a direct line with the centre of the crank axle, and parallel to each other at a distance of about 28 to 31 inches from centre to centre, for engines of 4 feet  $8\frac{1}{8}$  inches gauge.

### THE PISTONS.

The cylinders are of cast iron from  $\frac{\pi}{4}$ ths to  $\frac{\pi}{8}$ ths of an inch in thickness, and bored out truly circular and parallel from end to end, into which the pistons p p are fitted steam tight, and to the sides of which the steam is admitted alternately, so as to give a reciprocating motion to each, which is communicated to the crank axle by the piston rods r r and connecting rods e e, and a circular motion obtained.

## SUPPORT OF THE CYLINDERS.

For the mutual support of the cylinders a flange is sometimes cast upon the lower external diameter of each, in the direction of their length, by which they are bolted together, to prevent, as much as possible, any twisting of the tube plate taking place by the action of the engine.

#### THE STEAM WAYS.

The openings or steam ways o o, through which the steam is conducted to and from each side of the pistons alternately, are cast upon the cylinders, and to which they bear the following proportions:—Width across the cylinder, about  $\frac{2}{3}$ rds of its diameter; area,  $\frac{1}{16}$ th of the square of its diameter. The openings u u, through which the steam makes its escape to the atmosphere, are the same in length, but about double the width of the others.

#### THE VALVES.

The valves v v, by which the steam ways are covered, and by which the quantity of steam to each cylinder is regulated, are sometimes made of brass, but more generally of cast iron, and in the form of an in-

verted rectangular box, the internal length being equal to the length of the steam openings; width, their distance between, and depth about equal to one of the openings.

#### LAP OF THE VALVES.

The external width of each box, or face of the valve, is augmented by flanges of about  $\frac{1}{2}$  inch to 1 inch more than is sufficient to cover all the openings, and designated the lap of the valve. This augmentation is for the purpose of cutting off the communication with the boiler, previous to the pistons reaching the ends of the cylinders or return of the strokes, and thereby causing the diminished velocity of the pistons to be continued to the end of the stroke by the expansive force of the steam.

## MOTION OF THE VALVES.

The motion of the valves is obtained from the crank axle, by means of the eccentrics  $x \times x \times x$ , and communicated by the eccentric rods r r r r, and levers i i, &c. Two eccentrics, rods, &c., are adapted to each piston, so as to cause an easy and certain change of motion to take place when required. The two outer eccentrics cause a forward motion, and the two inner a backward motion of the engine, which are set to suit accordingly.

## THE LEAD OF THE VALVE.

The lead of the valve is a certain advance in the extent of its movement to the movement of the piston, but generally understood the quantity of opening for admitting the steam to the opposite side of the piston at its return of the stroke, for the purpose of obtaining the steam at a greater density for a first impulse to the piston. And, train engines, or engines running about

thirty miles per hour, require more lead than luggage engines with heavy loads which run at about half that velocity, the ratio of advantage derived from the lead of the valve being nearly as follows:—

Suppose the lead = 0, the velocity = 1.

", ", 
$$=\frac{1}{8}$$
 ", " = 1.016.
", ",  $=\frac{3}{8}$  ", " = 1.048.
", ",  $=\frac{5}{8}$  ", " = 1.103.

## THE BLAST PIPE.

The blast pipe y is a copper conical tube, the bottom end of which is attached to each cylinder, and a direct communication formed from the middle openings or thoroughfares under the valves, to the bottom of the chimney, for the purpose of allowing the steam to escape, after performing its duty in propelling the pistons, and also to render it available for the production of steam,—for, by its superior density, the air is expelled from out of the chimney, and thereby causes an excess of heated air to pass through the tubes. The bottom end of the blast pipe is about equal in area to the two middle openings on the cylinders, its height about an inch into the chimney, and its orifice one-fourth of the cylinder's diameter.

## THE CHIMNEY.

The chimney D is of rolled iron plates  $\frac{1}{6}$ th of an inch in thickness, its diameter  $\frac{7}{6}$ ths of the cylinder's diameter, and extreme height 13 feet 6 inches above the rails. The top is sometimes made in the form of a funnel, and extended to nearly twice the bottom diameter, and covered with No. 12 wire-work about  $\frac{7}{16}$ ths asunder. Others have the wire-work at the bottom of the chimney, and

directly above the ends of the tubes; in either case it is intended to prevent, as much as possible, any danger or annoyance from small pieces of hot coke which are carried from the fire through the tubes, by the action of the blast pipe.

The preceding are chiefly of what the boiler is composed, and a few parts of the engine, which it incloses. Hence, the following are external parts required to constitute the whole machine, and render its effects complete.

#### THE EXTERNAL FRAME.

The frame F F which surrounds the boiler is of oak or ash timber, about 7 inches by 3, and covered on each side with rolled iron plates  $\frac{1}{4}$ th of an inch in thickness, except the front or buffer board, which is not covered with iron, but is of considerably greater dimensions, say about 13 inches in breadth and  $5\frac{1}{2}$  or 6 inches in thickness, in order that it may be enabled to withstand the sudden shocks it is constantly liable to receive.

## THE KNEES.

The knees n n, &c., by which the boiler is supported and attached to the frame, are of wrought iron, 4 inches broad and  $\frac{3}{4}$ ths or  $\frac{7}{8}$ ths of an inch in thickness. The front and middle knees are each rivetted to the boiler; those on the back end are attached by screws, so as to be easily removed when the copper fire box requires to be renewed.

### THE GUARD PLATES.

The guard plates ggg, &c., are of wrought iron,  $\frac{\pi}{8}$ ths of an inch in thickness, and attached to the frame in pairs at the ends of each axle, for the purpose of keep-

ing the axle boxes in their proper situations; the openings in the plates are made exactly parallel, and also fixed to the frame parallel to each other, so as to allow the axle boxes to move easily but accurately up and down, by which means the shaking motion of the engine is rendered comparatively little, through the action of the springs.

## THE SPRINGS.

The springs are generally composed of  $\frac{1}{4}$ th or  $\frac{5}{16}$ ths steel plates from 3 to 4 inches in breadth, and containing from ten to fifteen plates, varying in quantity and form with the weight of the engine and judgment of the maker; a proper tension of the springs being of very essential consequence to the benefit of the working parts and safety of the engine, as the shaking or tremulous motion through them may be considerably lessened; and I have found, from practice, that wheels and tires last much longer on engines where the springs are of a proper elasticity.

## THE AXLE BOXES.

The axle boxes q q q, &c., are sometimes made of brass, but more generally of cast iron, into which is fitted a lining or receptacle for the ends of the axles, composed entirely of copper and tin, so as to reduce the liability of the bearings becoming heated by the weight of the engine and velocity of the wheels.

Into the upper part of each axle box is formed a cavity, for the purpose of retaining a portion of oil or other lubricating matter, which is distributed by degrees, through small holes upon the bearings, and renewed occasionally, as required.

### THE AXLES.

The axles z z, on which the wheels are fastened, require to be of the best wrought iron, fagoted and welded together, generally termed fagoted iron, the ends or bearings being made all of the same length and diameter, and to suit the receptacles in the axle boxes, viz.,  $5\frac{1}{2}$  inches in length, and about  $3\frac{1}{4}$  in diameter; those parts on the front and back axles, on which the wheels are fixed, are about  $4\frac{1}{2}$  inches diameter, and the remainder, or middle part, from  $3\frac{5}{4}$  to 4 inches. Some makers contend, that diminishing the diameters of the axles towards the centre considerably reduces the liability of breaking where any inequality of the road takes place, but having seen only few in use of that description, I am not yet prepared to contend for, or attribute any particular merit to, the design.

The cranked or middle axle is that on which the driving wheels are fixed, the power communicated, and the motion of the engine obtained; it is composed of one solid mass of wrought iron, the cranked parts being set at right angles to each other, and cut out after the axle is forged, the bearings of the cranks, to which the connecting rods are fitted, being about 5 inches in diameter, and  $3\frac{1}{2}$  in length, the middle or stay bearings  $4\frac{\pi}{4}$  inches diameter, and  $2\frac{\pi}{4}$  in length, and the parts on which the wheels are fixed 6 inches diameter.

After the axles are turned and finished, the end bearings are properly case hardened, so as to render the surface of a close compact texture, approximating the nature of steel, which is found to be essentially necessary, on account of the whole weight of the engine resting upon those small bearings. When this precau-

tion is not adopted, and very superior brasses applied, the bearings become heated by friction, lubrication is destroyed, the surfaces of the axles become unavoidably rough, and afterwards no means whatever will prevent their heating, by which the velocity of the engine is retarded, the machinery destroyed, and an unnecessary quantity of fuel expended.

Exceedingly great attention on the part of engine-men require to be paid to those outer bearings, as they are generally termed, by seeing each axle box properly cleaned and lubricated at each end of the journey, and also when a moment of opportunity occurs at any stopping place on the road, the same examined by the touch of the hand, such attention being most required with a new engine, or any engine after receiving a general repair: but if the materials are good and properly manufactured, they soon become humoured to their proper bearings, and still keeping in mind cleanliness, less of other attention is required.

#### THE WHEELS.

The wheels are chiefly made of wrought iron, with cast iron naves, so as to combine the arms together, and form the means by which they may be firmly fixed upon their axles. Wheels are of very different constructions, varying, of course, with the opinions of the makers, but in all cases the arms and rim welded together. In some the arms are of flat iron, in others round, but each forming a plane surface to the centre. Another, and I believe the best form of wrought iron wheels, is round arms strutting from the rim to the nave in a zig-zag form, and in place of the arms forming a plane surface with the centre they form a double cone, and thereby

considerably augment the stability of the wheel, and diminish the tendency to the oscillating motion of the engine.

Wheels of wrought iron are very expensive to make, and unless made of considerable strength and superior workmanship, are apt to vibrate from the centre, by which it is not unfrequent to start the arms from the rim, and thereby render the wheels unsafe. To avoid, as much as possible, each of those inconveniences, east iron wheels have been introduced of late, which seem to answer very well; they have round arms, cast hollow, like pipes, so as to render the cooling, and, consequently, the contraction of the metal, nearly equal.

In each description of wheels the arms are commonly set about one foot apart on the rim, the cast iron arms being hollow, cause their diameter to be greater, and, consequently, their number less. In six feet wheels, with round arms of wrought iron, they are about  $2\frac{1}{8}$ th inches diameter at the rim, and contain 18 arms; cast iron wheels of the same diameter have arms about 3 inches diameter at the rim, and contain 16 arms. In either case the arms increase in diameter towards the centre about  $\frac{1}{8}$ th of an inch for each foot in length, and the naves of each are about 18 inches diameter. Hence, from the above dimensions, wheels of any diameter may easily be proportioned.

#### THE TIRES.

The outer rims or tires are of the best rolled iron, from  $1\frac{1}{3}$  to  $1\frac{3}{4}$  inches in thickness, and from 5 to 6 inches in breadth; the broader the tire, the less is it liable to become elongated by the weight and action of the engine upon the rails.

As a means of preventing the tires becoming loose upon the wheels, the external diameter of the wheels and internal diameter of the tires are turned to a plain even surface, leaving the tires of smaller diameter, so that, when heated, they may expand to a sufficient size, to go easily on to the wheel, and so, by the contracting power of the metal in cooling, may bind the two surfaces compactly together. The tires are afterwards turned to the dimensions and proper form required, the inner side of the wheel being made about ‡th of the breadth of the tire larger in diameter than the outer side, and thus renders the tire in form of a cone.

The diameters of wheels for locomotives are proportioned in the following manner:—

5 feet driving wheels, and 3 ft. 6 in. small wheels.

_	•	-		
5 <del>1</del>	,,	3	$7\frac{1}{2}$	,,
5 <del>]</del> 5 <del>]</del>	,,	3	9	٠,,
6	,,	4	0	,,
$6\frac{1}{2}$	99	4	6	,,
7	,,	5	0	,,

the tires of which require to be nearly of the following lengths when in their unbent state:—

Wheels 3 ft. 6 in. diam. tires 11 ft. 8 in. in length.

3	$7\frac{1}{2}$	,,	11	9	,,
3	9	,,	12	4	,,
4	0	,,	13	2	,,
4	6	,,	14	9	,,
5	0	,,	16	6	,,
5	3	,,	17	4	,,
5	6	"	18	2	,,
6	0	,,	19	10	"
6	6	"	21	5	,,
7	0	,,	23	1	,,

### ADHESION OF THE WHEELS.

The adhesion of the driving wheels is found to be about  $\frac{1}{2}$ th of the weight bearing upon them when the rails are clean, but vary with their dirty condition to about  $\frac{1}{10}$ th, consequently, for the purposes of calculation, generally reckoned at  $\frac{1}{6}$ th.

### PISTON RODS.

The piston rods rr are the means by which the power of the steam is conveyed outside the cylinders. Each rod being inserted properly into its respective piston p, is made to pass through the stuffing boxes n, which are filled with hemp or soft rope yarn, and compressed upon the rods sufficiently to prevent any escape of steam.

Piston rods for locomotive engines ought invariably to be of steel; being of a more compact texture than iron, it is of course stronger, less liable to corrode, and not so easily scratched or grooved, by which qualities unnecessary friction is avoided, and the packing requires to be less frequently renewed.

The diameters of piston rods may be proportionate to their cylinders, as follows:—

Cylinders 10 in. diam. piston rods 1.43 in. diam.

11	,,	• >	1.57	,,
12	,,	,,	1.71	,,
13	99	"	1.86	,,
14	**	"	2.0	,,
16	"	**	2.3	21

### THE CONNECTING RODS.

The links e e, by which the power is communicated from the piston rods to the cranks, are of wrought iron,

L. E.

and designated connecting tods, to each end of which is attached, by a wrought iron strap, a pair of semicircular brasses, one pair being suited to the diameter of the cross head h, and the other to the diameter of the crank bearings: these brasses are brought together upon their bearings by means of wedges or cotters, consequently a considerable degree of care is required in tightening these cotters, so that the brasses may neither be too tight, nor have any tendency to jump or shake upon their bearings at the return of the stroke, for in either case it causes a considerable liability to heating, and by which the cranks may ultimately be prevented in a great measure from revolving in their brasses, and thus cause an unnecessary degree of friction, and, probably, disarrangements to a serious extent, which might easily have been avoided.

### THE SLIDES, BLOCKS, &c.

As the connecting rods in their motion are unavoidably thrown out of a direct line with the piston rods, by the revolution of the cranks, and being attached to the piston rods, it is necessary their union be protected in a direct line with the cylinders: and in order to effect this, each is attached to a spindle, or cross head h h, on either end of which is a block of brass or cast iron m m, &c., guided between slides of cast iron or steel, which are attached to each inside frame in a direct line, with the cylinders. These blocks are about 6 inches in length,  $2\frac{1}{2}$  to 3 inches in breadth, and 2 inches in thickness, and, until lately, consisted of either brass or steel, but now are more frequently of cast iron, and found to wear extremely well.

The slides are attached together in pairs, by a stud

at each end, and kept in their proper situations by the inside frames.

### THE ECCENTRICS,

As a continued circular motion is obtained from the reciprocating motion of the pistons, by means of the cranks, so is an alternate motion obtained from continued circular motion of the crank shaft, by means of the eccentrics.

The eccentrics x x, &cc., are cast iron wheels or pulleys, about 9 inches in diameter and 2 inches in thickness, which are fixed upon the crank shaft, each having its centre of motion as far from the centre by which it is described as half the travel of the valve, unless the levers by which the motion is communicated be of unequal lengths, and if so, the case becomes involved into arithmetical proportion; hence the following simple rules become applicable to the demand, in which let all the dimensions be in the same terms:—

 The travel of the valves and length of levers being given, to find the required throw of eccentrics:

RULE,—Multiply the travel of the valves by the length of the levers to which the eccentric rods are attached, and divide the product by the length of the levers which more immediately communicates the motion to the valves, the quotient is the required throw of eccentrics.

Ex.—Suppose an engine, the travel of whose valves are each  $3\frac{1}{2}$  inches, the length of the levers to which the eccentric rods are attached  $6\frac{1}{2}$  inches, and the

length of the levers more immediately attached to the valves  $5\frac{3}{4}$  inches, required the throw of eccentrics:

- $3.5 \times 6.25 = 21.875 \div 5.75 = 3.8$  inches throw of eccentrics, or  $3.8 \div 2 = 1.9$  inches between their centre of motion and centre by which they are described.
- 2. The travel of the valves, the length of the levers to which the eccentric rods are attached, and throw of eccentrics being given, to find the length of the levers immediately giving motion to the valves:

Rule.—Multiply the travel of the valves by the length of the levers to which the eccentric rods are attached, and divide by the throw of the eccentrics, the quotient is the length of the levers immediately connected with the valves.

Suppose, as in the preceding example,

Then,  $3.5 \times 6.25 \div 3.8 = 5.75$  length of levers.

3. The length of the levers immediately attached to the valves, the throw of eccentrics and travel of the valves being given, to find the length of the levers to which the eccentric rods are attached:

RULE.—Multiply the throw of the eccentrics by the length of the levers attached to the valves, and divide by the travel of the valves: the quotient is the length of the levers to which the eccentric rods are attached.

Thus, as before,  $3.8 \times 5.75 \div 3.5 = 6.25$  length of levers.

4. The throw of the eccentrics and the length of the levers being given to find the travel of the valves:

RULE.—Multiply the throw of the eccentrics by the length of the levers immediately connected with the valves, and divide by the length of the levers to which the eccentric rods are attached, and the quotient is the travel of the valves.

 $3.8 \times 5.75 \div 6.25 = 3.5$  travel of the valves.

Surrounding the eccentrics are hoops of brass, to which the rods are attached; the rods r r, &c., are of wrought iron, the stud ends of which are in the form of a V, which are allowed to drop clear of the studs, but only so far as to be still kept within their range, and, by a combination of levers, which is communicated to the back end of the boiler, can be lifted at any moment by the engine-man with certainty, so that the motion of the engine may be changed as required.

### THE PUMPS.

The pumps p p, are of brass, and fixed to the inside frames, for the purpose of supplying the boiler with water against the force of the steam; the strokes of the pumps are equal to the strokes of the pistons, being attached, and worked from the cross-heads; the rams, by which the water is displaced in the pumps, are of wrought iron, and about  $\frac{1}{7}$ th of the cylinder's diameter. The water is conducted from the tender to the pumps by copper pipes, into each of which is placed a valve, for the purpose of preventing the water returning to the tender by the action of the pumps, consequently, what is displaced by the rams is forced into the boiler. It

is conveyed in pipes of the same description from the pumps to the boiler, but in each of these are placed two valves, being required, not only for preventing the water returning, but also to prevent, as much as possible, any accumulation of steam in the pipes, by which a proper action of the pumps is destroyed. The valves used are termed ball valves, being spheres of brass 2 to  $2\frac{1}{2}$  inches in diameter, situated in the pumps or valve seats covering the orifices of inlet to the boiler.

The various parts bear nearly the following proportions to each other, viz.:—Openings equal to the diameter of the pump rams; diameter of the balls not less than \$\frac{3}{5}\$ths the diameter of the openings; rise of the balls half the diameter of the openings; and the face on which the ball rests \$\frac{1}{16}\$th of an inch in breadth.

One pump is of sufficient capacity to supply the boiler in all ordinary cases, but two are provided against particular emergencies. The pipes which communicate with the tender are of copper, and about  $\frac{1}{8}$ th of an inch in thickness.

### THE PET COCK.

Into each pipe, between the pumps and the boiler, small cocks are inserted, termed pet cocks, for the purpose of allowing any steam to escape that may have accumulated during the pump's absence of active working, and also for ascertaining when the pumps are in proper condition. The means of opening each is communicated to the back end of the boiler by rods, so that they may be opened or shut at pleasure.

### SPLASH BOARDS.

The splash boards are curved brass or iron plates

covering the rims of the driving wheels above the top of the frame, for the purpose of preventing dirt and oxide of iron, which accumulate upon the rails and adhere to the wheels in wet weather, getting distributed or spread over various parts of the engine by the velocity of the wheels.

### OIL CUPS.

Over each bearing or rubbing surface is placed a cup to contain oil, in the centre of which, and projecting to nearly the top of the cup, is a small pipe of iron, into which the ends of a few worsted threads are inserted, the remainder, about 5 or 6 inches in length, being coiled loosely round the tube in the cup; the cups being filled with oil, the threads act as a syphon, so that a constant supply is kept upon the bearings.

These cups were formerly of brass, and screwed into their various situations; but by the rapid motion of the engine they frequently became unscrewed before the end of the journey, and not only got lost, but the parts became heated for want of that lubrication which is constantly required. To obviate this uncertainty, and, at the same time, to embrace the advantages arising from this mode of lubrication, the cups have latterly been formed out of the same material into which they used to be screwed, thus rendering them, if kept in proper condition, both certain and efficacious.

### SPLIT PINS.

The same uncertainty attends a number of the bolts and cotters in the engine, which is remedied by introducing small split pins through the point of each, so that although they may become unscrewed, they are prevented from getting lost.

#### SAFETY COCKS.

Into each cylinder cover is screwed a cock, for the purpose of allowing an escape of water which frequently accumulates in the cylinders while the engine is standing, and the same precaution ought to be taken in introducing cocks into each valve box, as water also accumulates there in a similar manner, when all the apertures are covered by the valves, for I have seen instances of this kind where great violence was required before the valves could be removed, causing extreme danger to the working parts, and sometimes considerable delay.


### THE FOOT BOARD.

The foot board, as it is generally termed, is a wrought iron plate at the back end of the boiler, and fixed to the top of the frame, in a line with the bottom of the tender, which serves as a platform for the men in their active duties upon the engine: it is also a support to the pin of the drag link, by which the tender is attached to the engine.

Having, in the preceding remarks, described the most prominent parts of a railway locomotive engine, it is only necessary to add the tender, and the machine is complete.

### THE TENDER: WEIGHT OF ENGINES, &c.

The tender consists of a wrought iron tank, placed upon a strong frame-work of timber, which is supported and conveyed upon 4 or 6 wheels, as may be required, according to its weight. The axles, axle boxes, guard plates, springs, &c., being similar to those upon the engine, it is quite necessary, for the sake of safety, to

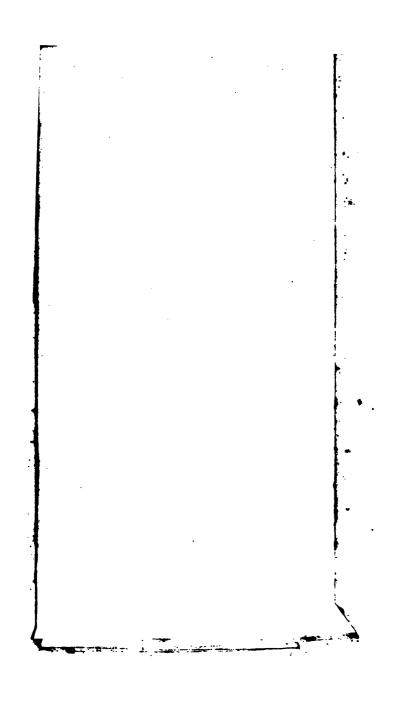

ii di la ai ti u al au P have them of a proper tension. Tenders are generally made sufficient to contain from 700 to 800 gallons of water, and from 10 to 12 cwt. of coke, this being about the necessary expenditure for a 30 mile trip of an engine containing 12 inch cylinders and 18 inch strokes. An engine of this description, when fully equipped with coke and water, is about 12 tons in weight, and the tender similarly situated is about  $6\frac{1}{2}$ . The weight of the engine upon the driving wheels is about  $6\frac{1}{4}$  to 7 tons.

### **PRELIMINARIES**

TO THE

### CALCULATION OF USEFUL EFFECT

IN

### LOCOMOTIVE ENGINES.

In order to determine the useful effect of a locomotive engine, it is necessary to observe that 6 lbs. per ton of its own weight is expended in overcoming the friction of its parts; 9 lbs. per ton of gross load for horizontal traction and additional friction which is caused to the engine by the load; and 14.7 lbs. per square inch, the pressure of the atmosphere. These being premised, the following calculations are easily determined:

1. The weight of an engine, tender, and load, being given, also the dimensions of cylinders and diameter of driving wheels, to find the force of steam required to overcome that resistance:

RULE.—To the gross load of the train in tons, multiplied by 9, add the friction of the engine,—multiply that sum by the diameter of the driving wheels in

inches, divide the product by the capacity of the cylinder, and the quotient, plus 14.7, equal the pressure of the steam in lbs. per square inch.

EXAMPLE.—Suppose a train of 80 tons, engine 12, and tender 6½, driving wheels 5½ feet or 66 inches diameter, cylinders 12 inches diameter and 18 inches strokes, required the pressure of steam per square inch:

 $80 + 12 + 6\frac{1}{2} = 98.5$  tens gross load  $\times 9 = 886.5$  lbs. travtion. Friction of engine  $12 \times 6 = 72$ 

958.5

Diameter of wheels ...... 66

Cylinders  $12^{\circ} \times 18 = 259)63261(24.4 + 14.7 = 38.11$ lbs. per square inch.

To ascertain the pressure of steam necessary, supposing the engine be required to ascend an incline with the same load, under similar circumstances, and at an equal velocity:

- Rule 1. Divide 2240, or the number of lbs. in a ton, by the inclination of the plane to 1 or unity, to the quotient of which add 9, and divide the sum by 9, the result is the effect of gravity upon the plane.
- 2. Multiply the pressure of steam required upon the horizontal line, minus 14.7, by the effect of gravity upon the plane, and the product, plus 14.7, is the force of steam required per square inch.

Suppose the terms as in the last example, and the engine has to ascend an incline of 1 in 160.

$$\frac{2240}{160} = \frac{14+9}{9} = 2.55$$
, effect of gravity to 1 of

horizontal traction.

And  $38.11 - 14.7 \times 2.55 = 62.2 + 14.7 = 76.92$  lbs. per square inch, before the engine can ascend the plane at an equal velocity.

To determine the diameter of the driving wheels of an engine for a given load, when the effective capacity of the cylinders and force of the steam are given:

Rule.—Multiply the capacity of the cylinder in inches by the effective force of the steam in pounds per square inch, and divide the product by the amount of traction, plus the friction of the engine, the quotient is the diameter of the wheels in inches.

EXAMPLE.—Required the diameter of the driving wheels for an engine with 12 inch cylinders and 18 inch strokes, the effective force of the steam being 50 lbs. per square inch, and the weight of the train 200 tons, engine 12, and tender 6.

$$200 + 12 + 6 = 218$$
 tons gross load.

And  $\overline{218 \times 9} + \overline{12 \times 6} = 2034$  lbs. force of traction and friction of the engine.  $12^2 \times 18 \times 50 = 129600$  lbs. effective force produced by the steam. Hence,

$$\frac{129600}{2034} = 63.7 \text{ inches, diameter of wheels.}$$

Again, how much must this load be reduced, so as to enable the engine, under the same circumstances of pressure, &c., to ascend an incline of 1 in 140?

$$\frac{2240}{140} = \frac{\overline{16+9}}{9} = 2.77$$
. And  $\frac{200}{2.77} = 72.2$ 

consequently, 200 - 72.2 = 127.8 tons, the train must be reduced.

# OF THE EFFECT OF A LOCOMOTIVE ENGINE IN HORSES' POWER.

3. To determine the effect of a locomotive engine in horses' power:

Rule.—Multiply the total resistance in pounds by the velocity in miles per hour, and by the constant number 2.66, cut off five figures from the right hand of the product for decimals, the remainder is the effect of the engine expressed in the term horses' power.

EXAMPLE.—Required the number of horses' power an engine is equal to when the force of the steam will overcome a load of 221 tons, the engine being 12 tons, and tender 7, or gross load 240 tons, at the rate of 14 miles per hour.

Then,  $2232 \times 14 \times 2.66 = 83.11968$  horses' power.

If the number of horses' power thus obtained be multiplied by the constant number 375, the product will be a constant number whereby to obtain the velocity of any other load by the same amount of power.

Thus, suppose the horses' power the same as above, but the total resistance only 1800 lbs., required the velocity:

$$\frac{83.11968 \times 375}{1800}$$
 = 17.2 miles per hour.

 $<sup>240 \</sup>times 9 + 12 \times 6 = 2232$  lbs. resistance and friction of the engine and train.

### TEMPLETON ON THE

# TIME AND DISTANCE TABLE, TO ASCERTAIN THE RATE OF TRAVELLING ON A RAILWAY.

Secs. per ‡ Mile.	Secs. per Mile.	Miles per Hour.	Secs. per ½ Mile.	Secs per Mile.	Miles per Hour.	Sees. per 1 Mile.	per	Miles per Hour.	per 1	Secs. per Mile.	Miles per Hour
11.2	45	80.0	14.1	561	63.7	17.0	68	52 9	26.3	105	84.3
11.3	451	79.5	14.2	564	63 4	17.1	681	52.7	26 5	106	34 0
11.4	451	79 1	14.3	57	68.2	17.1	681	52.5	26.8	107	33.6
11.4	453	78.6	14.3	571	62.9	17.2	684	52.3	27.0	108	33.3
11.5	46	78.3	14.4	574	62.6	17.3	69	52.2	27.3	109	33.0
11.6	464	77.8	14.4		62.3	17.3	691	52.0	27.5	110	32 7
11.7	464	77.4	14 5	58	62.1	17.4	691	51 8	27 8	111	32.4
11.7	47	77.0	14.6	584	61.8	17.4	694 70	51.6	28.0	112	32.1
11 8	471	76.2	14.7	584	61.2	17.5	701	51.4	28.3	113	32.7
11 9	475	75.7	14.8	59	61.0	17.6	701	51.2	28.5 28 8	114	31.6
11.9	473	75.3	14.8	591	60.7	17.7	701	50 8	28 8	116	31.0
12.0	48	75.0	14.9	591	60.5	17 8	71	50.7	29.3	117	30.8
12.1	481	74.6	14.9	593	60.2	18.0	72	50.0	29.5	118	30.5
121	484	74 2	15.0	60	60.0	18.3	73	49.3	29 8	119	30.3
12.2	484	73.8	15.1	601	59.7	18.5	74	48.6	30.0	120	30.0
12.3	49	73.5	15.1	604	59 5	18.8	75	48.0	30.3	121	29.8
12.3	491	73.1	15.2	100	59.2	19 0	76	47.4	30.5	122	29.5
12.4	494	72.7	15.3	61	59.0	19 2	77	46.8	30.8	123	29.3
12.4	491	72.3	15.3	611	58.7	19 5	78	46.2	31.0	124	29.0
12.5	50	72 0	15.4	61	58.5	19.8	79	45.6	31.3	125	28.8
12.6	501	71.6	15.4	617	58.3	20.0	80	45.0	31 5	126	28.6
126	504	71.2	15.5	62	58 1	20.3	81	44.5	31.8	127	28.3
12.7	504	709	15.6	62	57 8	20.5	82	43.9	32.0	128	28.1
12.8	51	70 6	15.6	624	57.6	20.8	83	43 4	32.3	129	27.9
12.8	511	70.2	15.7	627	57.3	21 0	84	42.9	32.5	130	27.7
12.9	514	69.9	15.8	63	57.1	21.3	85	42.4	328	131	27.5
12.9	514	69.5	15 8	631	56.9	21.5	86	41.9	33.0	132	27 3
13.0	52	69.2	15.9	634	56.7	21 8	87	41.4	33.3	133	27.1
13.1	524	68.9	15.9	631	56.4	22.0	88	40 9	33.5	134	26.9
13.1	524	68.5	16.0	64	563	22.3	89	40.4	33.8	135	26.6
13.2	524	68.2	16 1	641	56.0	22.5	90	40.0	34.0	136	26.5
13.3	53	67.9	16.1	641	55.8	22.8	91	39.6	34.3	137	26.3
13.4	531	67.6	16.2	64	55.6	23.0	92	39.1	34.5	138	26.1
13.4	584	67.2	16.3		55.4	23 3	93	38 7	34.8	139	25.9
13.4	534	66.6	16.3 16.4	651	55 1	23 5	94	38.3	85.0	140	25.7
13.5 13.6	54	66 3	16.4	651	54.9 54.7	23.8 24.0	95 96	37.9	35.3	141	25.5
13.6	544	66 0	16.5	66		24.3		37.5	35.5	142	25.4
13.7	544	65 7	16.6	661	54.5	24.5	97 98	37.1 36 7	35.8	143	25.2 25.0
13.8	55	65.5	16.6	661	54.1	25.8	99	363	36.0	145	24.8
13.8	551	65.1	16.7	663	53.9	25.0	100	36.0	36.5	146	24.7
13.9	555	64.8	16.8	67	53.7	25.3	101	35 6	36.8	147	24.5
13.9	554	64.5	16.8	671	53.5	25.5	102	35.3	37.0	148	24.3
14.0	56	64.3	16.9	67	58 8	25.8	103	35.0	37.3	149	24.2
14.1	561	64.0	16.9	67	53.1	26.0	101	31.6	37.5	150	24.0

Whereby to ascertain the Total Resistance of Loads arising from Gravity and Priction on Inclined Planes, taken at \$10 the weight. A TABLE

			INCE	INCLINATION O	OF THE P	PLANE ==	TO I IN			
	0	100	200	300	400	200	009	700	800	006
•	.004167	.0141667	7991600	.0075	2999900*	7991900	.0058333	.0055953	.0054167	.0052778
10	.0041667	.0132575	.0089285	.0073925	2909900	.0061275	.005806	.0055752	.0054013	.0052656
8	.054167	.0125	.008712	.0072917	.0065477	8680900*	9622900	.0055555	.0053862	.0052537
ູ່ສ	.0375	.01213	.0085144	.007197	.0064923	.0060535	.005754	.0055316	.0053715	.005242
3 9	.029167	.0113095	.0083333	6201200.	.0064394	.0060185	.0057292	.005518	.0053572	.0052305
2 9	.024167	.010833	.0081667	.0070238	.0063889	.0059848	.0057052	.0055	.0053432	.0052193
3, 9	.020833	.010417	.0080129	.0069444	.0063406	.0059224	.0056818	.0054825	.0053295	.0052083
3	.018452	.01001467	4078700	.0068694	.0062944	.0059211	.0056592	.0054654	.0053161	.0051976
2	.016667	.009722	.0077381	.0067983	.00625	.0058908	.0056373	.0054488	.005303	.0051871
æ	.0152778	.0094298	.007615	.0067308	.0062075	.0058616	.005616	.0054325	.0052903	.0051768
8										

sary lesser inclination, divide 1 by the length of the plane to a height of unity, and add to the quotient .004167.

"To use the table, look along the top line for the hundreds, and down the left hand column for the tens, of the rate of inclination, to be point of intersection will be found a number which is to be multiplied by the total weight of the load in lba for the total as a fact. Thus,—suppose a load weighing 8000 lba at an inclination of 1 in 860, ... 1068214 × 8000 = \$1.5792 lba.

### ADHESION OF ENGINES.

The adhesion of engines may be taken as at least equal to  $\frac{1}{10}$ th part of the weight on the driving wheels. This will enable them to draw in the following proportions for each ton of the weight resting upon them, under the most unfavourable circumstances of weather, &c.

Inclination	Load in tons	Inclination	Load in tons for each ton adhesion.	Inclination	Load in tons
of the	for each	of the		of the	for each
plane.	ton adhesion.	plane.		plane.	ton adhesion.
1 in 4480 1 in 3360 1 in 2240 1 in 1680 1 in 1120 1 in 1900 1 in 900	26.25 24.21 23 58 22.40 21.33 20.86 20.37	1 in 800 1 in 700 1 in 600 1 in 500 1 in 448 1 in 400 1 in 350	19.82 19.14 18.31 17.25 16.59 15.88 15.03	1 in 300 1 in 250 1 in 200 1 in 150 1 in 100	14.03 12.83 11.37 9.56 7.25

The adhesion of the wheels is frequently least where the greatest is required; namely, at depôts, stations, &c., the whole weight of the train having then to be overcome, and motion produced, for which reasons the regulator should never be suddenly opened in starting, as a rapid motion of the parts of the engine is only by such means obtained, and at a very great risk of derangement, with little effect upon the train. Strewing the rails with sharp sand, when they are dirty or greasy, is a means by which adhesion is considerably increased, consequently a greater force of steam can be effectively admitted, and a proper velocity of the train sooner obtained.

# LOAD AN ENGINE IS QUALIFIED TO TAKE ON DIFFERENT INCLINATIONS.

The quantity of coke required to convert a cubic foot of water varies according to the quality, but, on an average, may be taken at 9 lbs. per cubic foot; hence the following table exhibits the load and velocity on different inclinations, when 60 cubic feet of water per hour can be converted into steam:

Inclina- tion of the plane.	10 miles per hour.	12½ miles per hour.	miles per hour.	17½ miles per hour.	miles per hour.	miles per hour.	miles per hour.	27½ miles per hour.	30 miles per hour.
Level.	Tons.	Tons. 251	Tons.	Tons.	Tons.	Tons.	Tons.	Tons.	Tons 30
l in 4480	326	236	176	134	102	77	57	41	27
1 in 2240	308	223	166	126	95	72	53	37	25
1 in 1120	276	200	148	112	84	63	46	32	20
1 in 1000	270	195	145	109	82	61	45	31	19
l in 900	265	191	142	107	80	60	43	30	19
1 in 800	256	184	137	102	77	57	41	28	18
1 in 700	246	177	131	98	74	55	39	27	16
1 in 600	235	169	125	93	70	51	37	25	15
1 in 500	220	158	116	87	65	47	34	22	13
lin 400	201	144	106	78	58	42	29	19	10
1 in 300		125	91	67	49	35	24	15	7
1 in 200	138	98	70	51	36	25	16	8	2
1 in 100	84	55	38	25	16	9	3		

	ij
	Ì
	ı
	ı
	ı
	ı
	ı
	ı
	I
	ĺ
8	I
	ı
Ú)	ı
	۱
П	١
	ı
14	١
- 1	
- 1	
_1	
- 1	
- 1	i
И	1
-	
-1	Ġ
-1	
1	1
1	1
	1
1	
- 1	
- 1	

STATISTICAL DATA OF THE PRINCIPAL RAILWAYS IN GREAT BRITAIN	OF THE PR	INCIE	AL RAILW	AYS IN	GREA	T BRI	TAIN.		ı
STATIONS, TERMINI, &c.	Datum of Level.	evel.	Total Total Length.  Ft. In. Mls. Chs. Lks.	Heaviest Gradient	Rise in feet per mile.	Effect of borizontal borizontal traction.	Summit level above the sea.	Number of Shares.	Amount of Share.
Arbroath and Forfar, Water mark Commencing at Arbroath Harbour at Arbroath I Terminus at Forfar	Above high water mark at Arbroath.	86	15 15 0 1 in 200 26.4	1 in 200	26.4	2.24	Feet.	2800	A 5
BIRMINGHAM AND DERBY JUNCTION,	Below the				-	4		1	200

London and Birmingham Railway at Traus at Hampton 21 9
Junction with North Midland Railway,
Derby 153 3 38

Andrand Kallway	Above 48 k
n Midiand Kaliway,	PLOUCESTER,

100

				-	1004 1111 1111 1111 1111 1111	1000	7.1.7		mea
BIRMINGHAM AND GLOUGESTER, Commencing at Spa-road, Gloucester Camp-hill, Birmingham Depot	Above Trinity.	48 5 410 10	15	30 30	48 5 11 30 30 1 in 37 142.7 7.72 529	142.7	7.73	529	9500
BRMINGHAM, BRISTOL, AND THAMES JUNCTION, COMMENCING BASIN, LONGON	Below Trinity.	2 1							

Camp-hill, Birmingham Depot		410 10	51	30 30	1 in	37	142.7	7.73	529	9500	100
BREMINGHAM, BRISTOL, AND THAMES JUNCTION, COMMERCING At Kensington Canal Basin, London Edirmingham Railway	Below Trinity. Above Trinity.	2 1 102 6	61	11 43	2 71 43 1 in 30		176	9.29		7500	8
Borron and Pressron, Commencing at Bradford-sqr., Bolton, Junction with North Union Railway at Leyland Leyland Leyland Leyland Leyland	Above low vater mark it Liverpool.	311 4	7	88		32	9	2.9		7000	20
BRISTOL AND EXETER,						1					

Woodside Brook-street, Chester And Joins Grand Junction at Crewe	atliverpool. 42	45 181	4-10	4.55	24	50	3.5	330	16	1.75		5000	33
CROYDEN, Commencing at Greenwich Railway, I mile 46 chains 50 links from London Bridge Terminus at Croyden	Above Trinity.	17	040	19	98	00		001	52.8	3.49		20000	8
EASTERN COUNTIES. Commencing at Shoreditch, London, Yarmouth	Above Trinity high water mark.	54	09	126	39	35	1 1	in 100	52.8	3.49		64000	25
BDINBURGH AND GLASGOW, Commencing at Haymarket, Edin- burgh.  Terminus, north end of Queen-street, Glasgow.	Above high water mark in Clyde.	143	75 0	94	0	0	ı.	53	12.5	6.9	226	18000	20
GLASGOW, PAISLEY, AND GREENOCK, Commencing at Boyle-st., Greenock, Terminus at Glasgow	Above high water mark at Greenock.	293	00	53	83	0	1 ii	330	-	1.75	99	16000	25
GRAND JUNCTION, Commencing in Junction with Liverpool and Manchester Railway Depot, Curzon-street, Birmingham	Above low water mark at Liverpool. 125	125	4 10	. 8	20	*8	l in	8	62.1	3.93	44	10400	100
GREAT NORTH OF ENGLAND, Commencing at the River Tyne, Newcastle fermination at the York and North Midland Railway at York		20 11 46 10	11 8	2	13	02	1 10	1 in 330	99	1.75	324	10000	8

STATIONS, TERMINI, &c.	Datum of Level	f Leve		r'a	Total Length.		Heaviest Gradient		e in feet.	flect of ity to I of prisonal prisonal raction.	nmmit el above sea	nmber of bares.	mount.
,		Ŧ.	In.	MDs.	Mis. Chs. Lks.	- 8			. I	ELWA ELWA E	S leve th	N.	V OI
GREAT WESTERN, Commencing at Bristol Depot London Terminus, Paddington	Above Trinity.	17	00	117	32 34		1 in 100		52.8	3.49	Feet. 226	25000	જ ટ્ર
			_					Z	New or		Half Share.	25000	20
HULL AND SELBY, Commencing at Station, Hall Junction with Leeds and Selby Kailway	Above high water mark in Humber.	10.5	0-	ಜ	51 (		I in 240		22	2.04	20	8000	<u>\$</u>
LANCASTER AND PRESTON JUNCTION, Commencing at Lancaster Station Junction with North Union Railwey	Above surface of Lancaster Canal.	120 10 87 1	0.1	ន	18 (	0	l in 500		10.5	1.5		2000	28
										New	New Shares	2000	874
LAVERPOOL AND MANCHESTER, (now LANDON AND NORTH WESTERN,) commencing at Lime-street Station, Liverpool.  Station, Manchester	Above low water mark at Liverpool. 116	82 116	09	8	53	0	1 in 88		60 Quan Haif	3.83 ter Shares	20   3.83   215 Quarter Shares Half Shares	7968 <del>3</del> 546 7968	52.50
London and Birmingham, Commencing at Station, Euston-square, London Birmingham Depot	Above Trinity.	36 58 36 58	200	112	10	0 1	1 in 75		70.4	4.32	390	25000	18
									OZ.	ter Sh Share	Quarter Shares	25000 31250	88

0 16 5 0 1 in 17 310.6 15.6	Commencing at Leeds Depot, Marsh-river lane lane Humber 110 Terminus at Selby 10	river Humber.	<u> </u>		8	•	-	1 fn 137	137	38.5	2.82	242	2100	8
Above Low water mark at Liverpool 210 7 6 52 50 1 in 378 13.9 1.66  Above low water mark at Liverpool 169 6  Above low water mark at Liverpool 210 7 8 13.9 1.66  Extension Bates at Liverpool 210 7 8 13.9 2.66 476	SWANNINGTON, WAR MAR West Bridge, Leicester at Li	ove low er mark dverpool.	130	0 H	16	I		l ii	17	310.6	15.6 New 8	Shares	1500	25 25
Above 2 0 1 in 250 21.1 2 394  Trinity. 3 8 76 55 20 1 in 250 21.1 2 394  Above low water mark 169 6 1 in 378 13.9 1.66	•	Above Hnity.	151	20	1								\$6000	3
Above low water mark stild of the still of t	Commencing at the Station, Nine-	A bove frinity.	0.00	08	92	1		l ii	250	21.1	69	394	36000	388
iteet, Man. Above low at Liverpool. 210 7 at Liverpool. 210 7 49 76 0 1 in 150 35.2 2.66 476		bove low ker mark dverpool.	169	90				.9	378	13.9	1.66 Exter	ei cin	30000	2 2
New Shares	MANGHESTER AND LEEDS, Commencing at Lees-street, Man-water Chester Leeter at Unction with North Midland Railway, at Oakinshaw	ove low ter mark dverpool.	210	F 10	1	92		ii ii	150	35.2	2.66 New 8	476 Sbares	13000	100

STATISTICAL DATA OF THE	THE PRINCIPAL	IPAI		ILW	RAILWAYS IN		GRE	AT BE	GREAT BRITAIN.—Continued.	N.—Con	tinued.	
STATIONS, TERMINI, &c.	Datum of Level.	f Lovel.		Total Length.	Total Length.		Heaviest Gradient.	tise in feet per mile.	Effect of ravity to I of hortzontal traction.	Summit level above the sea.	Number of Shares.	Amount of Share.
MANCHESTER, BOLTON, AND BURY, Commencing at New Bailey-street, Salford Terminus at Bolton	Above low water mark at Liverpool. 121			0 01	0	-	in 160	8 8	2.55	Feet.	6200	₩ 8
MARYPORT AND CARLISES, Commencing at South Quay, Mary- port Jenction with Newcastle and Carlisle Railway	Above high water mark at Maryport Harbour.	C (24 C 24 C	0 0	28 3	20	l ii	500	25.2	2.2		4000	20
MIDLAND COUNTIES. Commencing at Rugby Junction of London and Birmingham Railway Station at Nottingham	Above low water mark river Humber.	322 94	09	47 35	200	E.	330	16	1.75	404	10000	100
NEWCASTLE AND CARLISLE, Commencing at Redheugh Quay, Newcastle Canal Basin, Carlisle	Above high water mark river Tyne.	57	9	01 70	•		l in 106	49.8 Qus	9.8 3.35 44 Quarter Shares	446 area	3000	100
NEWCASTLE AND NORTH SHIRLDS, Commencing at Pilgrim-street, New- castle	Above high water mark river Tyne.	103 10 86 3	-	6 79	8	1 in 180	180	29.3	2.38		2400	50

Nouth Minland, Commencing at Castle Fields, Derby Depot, Hunslet lane, Leeds	Above low water mark river Humber.	165	cc cc	73	29	0		l in 330	0 16	1.75 New	380 Shares	15000	100
Commencing at Dock-street, Preston water mark 87 Junction with Liverpooland Manchester at Liverpool. Raliway, at Parkside	Above low water mark at Liverpool.	87	0 0	53	-	0		1 in 100	0 52.8	3.49	285	6400	7.5
NORTHERN AND EASTERN, Commencing in Junction with Eastern Counties Railway Terminus, Cambridge	Above Trinity.	14 . 27	00	53	=	0		1 in 330	91 0	1.75		12000	100
SHEFFIXLD AND MANCHESTER, Commencing at Stone-street, Man- chester Terminus, Effingham-street, Sheffield	Above low water mark at Liverpool. 168	168	000	40	99	0	=======================================	1 in 120	4	3.07		7000	100
SHEFFIELD AND ROTHERHAM, Commencing at North Midland Rail- Way Terminus, at Sheffield	Above low water mark at Liverpool, 116	1116	400	4	. 29	20		1 in 377	7 14	1.66		4000	- 23
STOCKTON AND DARLINGTON, Water mark Commencing at Stockton Station river Toes.	Above low water mark river Tees.	217	00	- 8	98	65	1 in	n 33	160	8.54	583	2000	100
YORK AND NORTH MIDLAND, Tork function with North Midland Railway	Above sum- mer level of river Ouse at York.	35	ဖက	23	=	0	2	n 48	1 in 484 10.9	1.51		0029	20

# LENGTH OF VARIOUS RAILWAYS IN JUNCTION V EACH OTHER. London to Liverpool and Manchester. London and Birmingham Railway..... 1 Grand Junction to Junction with Liverpool and Manchester ..... From Junction to Liverpool ..... Or Junction to Manchester 16, = London to Leeds. London and Birmingham Railway..... 1 Birmingham and Derby ..... North Midland to Leeds..... Leeds to York. North Midland to Methley Junction..... York and North Midland to York ...... London to Brighton.

London and Greenwich Railway ......

Croydon line......

Brighton Railway to Brighton.....

### Manchester to Leeds.

2/2 4/10/100001 10 ==000001	
Manchester and Leeds Railway to Junction with	Miles.
North Midland	50
From Junction to Leeds	$10\frac{3}{4}$
	60 <del>3</del>
From Junction to York271 =	= 771/4
From Junction to Milford141	
Milford to Selby $6\frac{1}{2}$	
Selby to Hull $\dots 30\frac{3}{4}$	101₹

Note.—It may be necessary, as the lengths in the preceding tables are given in miles, chains, and links, to observe, that the chain is composed of 100 links, each link being 7.92 inches in length, consequently the length of the chain equals 22 yards, or 66 feet, and 80 chains equal 1 mile.

Hence, also, 5280 feet, or 1760 yards, equal 1 mile, and 1609.3059 French meters = 1 mile.

## EFFECT OF INCREASING THE DIAMETER OF THE WHEELS OF A LOCOMOTIVE ENGINE.

It is essentially necessary for all who are actively engaged with locomotive engines to be well aware of the increased velocity and momentum of a train by an increased diameter of driving wheels on the engine, so that disappointments in stopping, &c., may be carefully avoided; as for instance, an engine with 5 feet wheels will only go one-fourth of a mile by 84 revolutions of the wheels; an engine with 6 feet wheels will proceed onwards the same distance by 70 revolutions; and an engine with 7 feet wheels will make the same advance by the wheels only making 60 revolutions; consequently, to ascertain what will effect an equal velocity of the train,

Divide the velocity in feet per minute by the circumference of the driving wheels, also in feet, and the quotient will be the number of revolutions of the driving wheels to produce an equal velocity of the engine and train.

Thus, suppose an engine with 6 feet wheels, at a velocity of 30 miles per hour, or 140 revolutions per minute, required the number of revolutions of 7 feet wheels, so that the train shall retain an equal velocity.

$$\frac{5280 \times 30}{60} = 2640 \text{ feet per minute, and 7 feet dia-}$$

meter = 22 circumference nearly; hence,  $\frac{2640}{22}$  = 120 revolutions per minute, when the wheels are not slipping.

### CIRCUMFERENCE OF WHEELS.

A wheel 3 feet diameter equals 9.42 feet circumference.

$3\frac{1}{2}$	,,	10.99 say 11	,,
4	,,	12.56	,,
$4\frac{1}{2}$	,,	14.13	,,
5	"	15.7	,,
$5\frac{1}{2}$	,,	17.27	,,
6	"	18.85	,,
$6\frac{1}{2}$	. ,,	20.42	"
7		21.99 say 22	,,
•	• 99	buy ==	"

# REVOLUTIONS OF VARIOUS DIAMETERS OF WHEELS TO RETAIN EQUAL VELOCITIES.

5 ft. wheels at 15 miles \ hour= 84 revolutions \ min.

5 ft. wheels at 20 miles \$\psi\$ hour=110 revolutions \$\psi\$ min.

5 ft. wheels at 25 miles \ hour=140 revolutions \ min.

5 ft. wheels at 30 miles hour=168 revolutions min.

5 ft. wheels at 40 miles # hour=224 revolutions # min.

Those calculations only standing good when the wheels

are not slipping upon the rails, which is seldom the case after an engine has once attained its proper velocity, that velocity being always acquired previously to stopping at any station; and, although the wheels are hid from the view of those standing upon the engine, the cross heads are easily observed, and sometimes the puffs of the blast pipe can be counted, by which, in either case, with a little practice and attention, the rate or velocity of a train can be ascertained.

### RESISTING FORCE OF THE ATMOSPHERE.

The resistance of the atmosphere retards the velocity of an engine, and that resisting force increases nearly as the square of the engine's velocity, which has been proved by experiments for ascertaining the force of the wind, and from which the following approximate rule has been deduced:

Divide the square of the engine's velocity in miles per hour by 248, and the quotient is the resisting force of the air in lbs. avoirdupois per square foot of opposing surface. Thus,

Suppose the velocity of an engine 30 miles per hour,  $\frac{30^2}{248} = 3.6$  lbs. per square foot resistance.

Or,  $\frac{1}{248}$  = .00403, consequently the square of the velocity multiplied by .00403 = the resistance; thus,

 $30^{\circ} \times .004 = 3.6$  as before: hence the following Table,—

Velocity		Velocity		Velocity	
in miles	in lbs. avoir- dupois per	in miles	in lbs. avoir- dupois per	in miles	dupois per
per hour.	square foot.	hour.	square foot.	hour.	square foot.
	bquaro 1000i		5444401004		
1	.00403	21	1.777	41	6.774
2	.016	22	1.950	42	7.109
3	.036	23	2.121	43	7.451
	.064	24	2.321	44	7.802
4 5	.101	25	2.518	45	8.160
6	.145	26	2.724	46	8.527
7					8.902
	.197	27	2.937	47	
8	.258	28	3.159	48	9.285
9	.326	29	3.389	49	9.676
10	.403	30	3,627	50	10.075
11	.547	31	3.872	55	12.190
12	.580	32	4.126	60	14.508
13	.681	33	4.388	65	17.026
14	.789	34	4.658	70	19.747
15	.906	35	4.936	75	22,668
16	1.031	36	5.222	80	25.792
17	1.164	37	5.517	85	29.116
18	1.305	38	5.819	90	32.648
19	1.454	39	6.129	95	36.370
20	1.612	40	6.448	100	40.300

# EFFECTS OF ATMOSPHERIC RESISTANCE ON INCLINED PLANES.

From recent experiments upon planes of different inclinations, and with loads of various magnitudes, it is found that the rate of acceleration gradually diminishes until the train becomes at a uniform velocity, that uniform velocity depending upon the weight, form, and magnitude of the train, also the inclination of the plane, and atmospheric resistance, the resistance being subject to considerable variation at different velocities. Hence,

the results of those experiments tend to show that low gradients on railways are not altogether attended with the advantageous effects which have been hitherto ascribed to them; that, on the contrary, the resistance produced by steeper gradients can be compensated by slackening the speed, so that the power shall be relieved from as much atmospheric resistance, by the diminution of velocity, as is equal to the increased resistance produced by the gravity of the plane which is ascended. And, on the other hand, in descending the plane, the speed may be increased until the resistance produced by the atmosphere is increased to the same amount as that by which the train is relieved by the declivity down Thus, on gradients, the inclination of which it moves. which is confined within practical limits, the resistance to the moving power may be preserved uniform, or nearly so, by varying the velocity.

By some recent experiments on atmospheric resistance, it was ascertained that surfaces of the same shape, and proportionate to each other, as 9, 16, 36, 81, and moving with the same velocity, meet with resistance in the following proportions:—

### 9, $17\frac{1}{2}$ , $42\frac{1}{4}$ , and $104\frac{3}{4}$ .

A very considerable degree of attention requires to be paid to an engine on an inclined or undulating railway, to see that the boiler is properly filled upon the level or descending plane, as may occur, and also the fire well filled up and properly burnt through, especially if the engine is nearly loaded to the extent of its power, as the momentum of the train is soon destroyed upon the ascending plane, and, consequently, the effect of the blast pipe destroyed.

### PRODUCTION OF STEAM.

Steam is water highly rarified by the action of heat; heat is produced by combustion; combustion is supported by oxygen; and oxygen is one of the elements of the atmosphere, of which it constitutes about one-fifth. Different species of fuel require different quantities of oxygen to support their combustion, but it is generally estimated that 1 lb. of either coal or coke requires about  $2\frac{1}{3}$  lbs., or 29 cubic feet of oxygen for their complete combustion, for which, 145 cubic feet of air must pass through the fire, and also it requires about 1800 cubic feet for each cubic foot of water converted into steam.

Temperature in this country is measured by degrees of Fahrenheit's scale, of which the freezing point is 32°, and boiling point 212°. In France it is measured by the Centigrade scale, the freezing point of which is 0°, and boiling point 100°.

Elastic force of steam is that degree of power by which it is enabled to counterpoise any opposing resistance above the pressure of the atmosphere, and generally estimated in inches of mercury or lbs. avoirdupois; the avoirdupois lb. = .4535 French kilogrammes. The elastic force of steam is also sometimes computed by atmospheres, the atmosphere being equal to 30 inches, or .762 metres of mercury; or, in other terms, 14.7 lbs. avoirdupois per square inch, or 11.55 lbs. per circular inch.

### ELASTIC FORCE OF STEAM.

To find the elastic force of steam when in contact with the liquid from which it is formed, the temperature being given, Rule.—Add 51.3° to the temperature, and multiply the logarithm of the sum by 5.13; from the product deduct 10.94123, and find the natural number answering to the remainder as a logarithm, and this number increased by .1 will express the required pressure in inches of mercury.

Suppose the temperature to be 250° Faht., required the pressure.

Temperature 250

Add 51.3

301.3 corresponding logarithm 2.47900 multiplied by 5.13

12.7172700 deduct 10.94123

Corresponding number 59.7 = 1.77604 To be increased by .1

Required force 59.8 inch. of mercury 2.04 inches of mercury = a pressure of 1 lb. avoirdupois; consequently,  $59.8 \div 2.04 = 29.31$  lbs. per square inch,

### SPACE WHICH STEAM OCCUPIES.

To find the volume or space the steam of a cubic foot of water occupies when the steam is of a given elastic force and temperature, and separated from the liquid from which it was generated,—

RULE.—To the temperature in degrees add 459, multiply the sum by 76.5, divide the product by the force of the steam in inches of mercury, and the result will express the space in cubic feet which a cubic foot of water will occupy.

Let the force be 4 atmospheres, or 120 inches of mercury, and the temperatures 295° Faht., required the cubic space the steam will occupy.

$$295 + 450 \times 76.5 = 57681$$
, and  $57681 \div 120 = 481$  cubic feet.

#### REDUCTION OF STEAM.

To find the quantity of water at a given temperature necessary to reduce steam at a given temperature to water of a given temperature.

Latent heat of steam = 1000° Faht.

Suppose it be required to reduce steam at 220° to water at 100° by water at 52°, required the quantity to any given quantity of steam.

$$\frac{1000 + 220 - 100}{100 - 52} = 23.3 \text{ times the quantity of water}$$
to that of which the steam was produced.

Again, suppose steam at 220° to be reduced to water at 180°, by water at 52°, or the ordinary temperature of the atmosphere, required the quantity.

$$\frac{1000 + 220 - 180}{180 - 52} = 8 \text{ times the quantity that produced the steam.}$$

A TABLE CONTAINING VARIOUS PROPERTIES OF STEAM.

Elastic force in 1bs avoird. per square inch.	Elastic force in lbs. avoirdu- pois per square foot.	Elastic force in inches of mercury.	Temperature in degrees of Fahrenheit.	Volume of steam compared to the volume of water.
14.7 15 16 17 18 19 20 21 22 23 24 25 26 27 28	2116.8 2160 2304 2488 2592 2736 2880 3024 3168 3312 3456 3600 3744 3888 4032 4176	30 30.60 32.64 34.68 36.72 38.76 40.80 42.84 44.88 46.92 48.96 51.00 53.04 55.08 57.12	212 212.8 216.3 219.6 222.7 225.6 228.5 231.2 233.8 236.3 238.7 241.0 243.3 245.5 247.6 249.6	1700 1669 1573 1488 1411 1343 1281 1225 1174 1127 1084 1044 1007 973 941 911
30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50	4320 4464 4608 4752 4896 5040 5184 5328 5472 5616 5760 5904 6048 6192 6336 6480 6624 6768 6912 7056 7200	61.21 63 24 65.28 67.32 69.36 71.40 73.44 75.48 77.52 79.56 81.60 83.64 85.68 87.72 89.76 91.80 93.84 95.88 97.92 99.96 102.00	251. 6 253. 6 255. 5 257. 3 259. 1 260. 9 262. 6 264. 3 265. 9 267. 5 269. 1 270. 6 276. 0 276. 4 277. 8 277. 8 277. 2 280. 5 281. 9 283. 2	883 857 833 810 788 767 748 729 712 695 679 664 635 622 610 598 575 564 554

Elastic force in lbs avoird. per square inch.	Elastic force in lbs. avoirdu- pois per square foot.	Elastic force in inches of mercury.	Temperature in degrees of Fahrenheit.	Volume of steam compared to the volume of water.
51	7344	104.04	284.4	544
52	7488	106.08	285.7	534
53	7632	108.12	286.9	525
54	7776	110.16	288.1	516
55	7920	112.20	289 3	598
56	8064	114 24	290.5	500
57	8208	116 28	291.7	492
58	8352	118.32	292.9	484
59	8496	120.36	294.2	477
60	8640	122.40	295.6	470
61	8784	124.44	296.9	463
62	8928	126.48	298.1	456
63	9072	128.52	299.2	449
64	9216	130,56	300.3	443
65	9360	132.60	301.3	437
66	9504	134.64	302.4	431
67	9648	136.68	303.4	425
68	9792	138.72	304.4	419
69	9936	140.76	305.4	414
70	10080	142.80	306.4	408
71.	10224	144.84	307.4	403
72	10368	146.88	308.4	398
73	10512	148.92	309.3	393
74	10656	150 96	310.3	388
75	10800	153.02	311.2	383
76	10944	155.06	312.2	379
77	11088	157.10	313.1	374
78	11232	159.14	314.0	370
79	11376	161.18	314.9	366
80	11520	163.22	315.8	362
81	11664	165.26	316.7	358
82	11808	167.30	317.6	354
83	11952	169.34	318.4	350
84	12096	171.38	319.3	346
85	12240	173.42	320.1	342
86	12384	175.46	321.0	339
87	12528	177.50	321.8	335
88	12672	179 54	322.6	332
89	12816	181.58	323.5	332 328
90	12960	183.62	324.3	
. 91	13104	185.66	325.1	325
		200.00	020.1	322

Elastic force in lbs avoird. per square inch.	in lbs. avoirdu- pois per square foot.	Elastic force in inches of mercury.	Temperature in degrees of Fahrenheit.	Volume of steam compared to the volume of water.
92	13248	187.70	325.9	
93	13392	189.74	326 7	316
94	13536	191.78	327.5	313
95	13680	193.82	328.2	310
96	13824	195.86	329.0	307
97	13968	197.90	329.8	304
98	14112	199.92	330.5	301
99	14256	201.96	331.3	298
100	14400	204.0	332.0	295
110	15840	224.4	339.2	271
120	17280	244.8	345.8	251
130	18720	265.2	352.1	233
140	20160	285.6	357.9	218
150	21600	306.0	363.4	205
160	23040	326.4	368.7	193
170	24480	346.8	373.6	183
180	25920	367.2	378.4	174
190	27360	387.6	382.9	166
200	28800	408.0	387.3	158
			007.0	-00

### OF THE SAFETY VALVES.

Each locomotive engine is, or ought to be, furnished with two safety valves, the diameters of which may be determined by the following:—

To determine the dimensions of the safety valves for a locomotive engine:

RULE.—To the heating surface of the fire box, in square feet, add one-third the surface of the tubes, divide the sum by 13, and the square root of half the quotient equal each valve's diameter in inches at the narrowest part

Suppose the heating surface in the fire box of a locomotive engine equals 50 square feet, and tube surface 360 or  $\frac{1}{3}$ rd = 120, the engine to have two valves, required the diameter of each.

$$\frac{50 + 120}{13} = 13.07 \div 2 = \sqrt{6.535} = 2.55 \text{ inches}$$
 diameter each.

#### FUSIBLE ALLOYS FOR SAFETY PLUGS IN BOILERS.

An:	alloy o	f							Faht.
Lead 1	l part,	tin	3	parts,	bismuth	5	parts,	melts at	212°
Lead 1	Ĺ,,	tin	4	,,	bismuth	5		,,	246
		tin	1	,,	bismuth	1		,,	<b>286</b>
		tin	<b>2</b>	,,	bismuth	1		,,	336
Lead 2	2 "	tin	3	,,				,,	334
		tin	8	,,	bismuth	1		,,	392

Fusible points of the metals of which the alloys are composed—

Lead		 	 •	•		•	•	•	•	•	.612
Bism	uth	 									.506
Tin		 									.442

L. E.

Q.

#### ON THE BURSTING OF BOILERS.

On the bursting of boilers, the generally-received opinion seems to be, that a sufficient quantity of gas to create injury cannot be formed, and that the chief cause is a sudden excess of steam, caused by some parts of the boiler becoming heated to a maximum degree of evaporization, while the engine is not at work, and the safety valve not being sufficiently large to allow an escape equal to the accumulation. On this account the steam acquires a greater degree of density, and the plates become heated, so that the instant the engine is started to work the boiler is relieved, and very probably the water rises or ferments upon the sides of the boiler, by which a greater surface is formed for accumulation. This may occur long before the plates of the boiler arrive at a degree of red heat, which would be more likely to lessen the tendency than assist it, which has been shown by experiments made for that purpose at the Franklin Institute of Pennsylvania; and, besides these, much older experiments testify that water will not evaporate so soon upon metal heated to a high degree, as it will by a degree of heat which is much sooner attained. Thus, a drop of water used to be the instrument by which the temperature of maximum evaporation was determined; and also by the American experiments it was shown that a drop of water upon polished copper took 210 seconds to be wholly converted into vapour, when the surface of the metal was at a temperature of 445°, whereas a like quantity was evaporated in 3 seconds at a temperature of 292°; and when the copper was in the worst state of oxidation, the maximum point of evaporation was only 348°, which is soon attained, and at that point in that state the same

quantity of water was evaporated in one-fourth of a second.

In iron the temperature suffered but little variation, whatever was the condition of the metal, except it was very highly oxidated, and then its highest evaporating points were only about 35° above copper in the same condition. The time varied nearly in the ratio of the conducting power of the metals, being about  $2\frac{1}{2}$  to 1, the copper requiring the least.

It was also shown by these experiments that either hot or cold water injected into an engine boiler in its average state of oxidation, and heated to bright redness, no hydrogen gas was produced; but, that the resulting gas was nothing more than atmospherical air, deprived by the heated metal of more or less of its oxygen; that is to say, nitrogen more or less pure, according to the quantity of oxygen which has been absorbed, atmospheric air being composed of \$ths nitrogen and \$th oxygen

A recent occurrence at Newcastle seems fully to have established the fact of steam being highly charged with electricity, and which may ultimately be the means of increasing our knowledge on the subject of explosions; in the meantime, it is essentially necessary that constant precaution be maintained, by a careful examination of the safety valves, and more especially when the boilers are getting into a decayed state. In all cases of standing, when the steam is at its maximum height, one of the valves ought to be constantly eased, and the engine in no case suddenly started. Locomotive boilers, I consider, are not so liable to explode under such circumstances; but it is well known, that if steam be confined, and evaporation still going on, it very soon

acquires a high degree of density by small excesses of heat, as may be observed by the following table:—

Elastic force in lbs. per sq. inch above the atmosphere	Temperature in degrees of Fahrenheit.	Difference of or increase of temperature.	Elastic force in lbs. per sq. inch above the atmosphere	Temperature in degrees of Fahrenheit.	Difference of or increase of temperature.
50 55 60 65 70 75 80 85	301.3 306.4 311.2 315.8 320.1 324.3 328.2 332.0	5.1°F. 48 4.6 4.3 4.2 3.9 3.8	90 95 100 105 110 115 120	335.7 339.2 342.6 345.8 348.9 351.9 354.8	3.7°F. 3.5 3.4 3.2 3.1 3.0 2.9

QUALIFICATIONS AND DUTIES OF LOCOMOTIVE ENGI-NEERS, ENGINE DRIVERS, STOKERS, &c.

Locomotive engineer is a term applied to any person entrusted by the directors of a railway to superintend, and see kept in proper condition, the whole of the locomotive department, so that the company's benefit, and safety of the public, may be in some measure insured; consequently, any man filling this situation is highly responsible, and ought to be properly qualified.

- 1. He ought to be thoroughly acquainted with the nature of steam, its production, properties of expansion, calculation of effect, &c., so that he may be enabled in all cases to perform his duty with confidence, and, by a competent knowledge, be prepared to answer public or private demands when required.
  - 2. He ought to be theoretically and practically ac-

quainted with locomotive engines, the nature of the parts as a mechanical arrangement, and the application of steam as a motive power, so that, by his mechanical acquirements, he may be properly qualified to set or arrange the parts whereby to produce the greatest mechanical effect; and also, by his practice, may have acquired a competent knowledge of those parts most liable to derangement, by which he may be enabled to apply to them some efficient means of protection, which, probably, might not be considered necessary by those not practically acquainted with the incidents that frequently occur in locomotive engines.

- 3. He ought also to be properly acquainted with the nature of the materials of which an engine is composed, the quality of such materials, the proportionate strength that one metal bears to another, the rubbing of metals, by which friction is produced, &c., so that unnecessary strength may not be applied where it might tend to pull another part to pieces, and oil economized where lubrication is required.
- 4. It is also essentially necessary that a locomotive engineer be possessed, to a certain degree, of mathematical acquirements, so as to enable him to determine the amount of load that may be attached to an engine with safety, that it may be enabled to keep clear of any following train. He should also set positive bounds to the engine drivers in nearing any station or stopping place, where the steam must be shut off.
- 5. His duties, of course, are an application of his qualifications, joined with strict attention and close

investigation, having a particular eye to cleanliness, and he should, if possible, never allow an engine to go out when uncertainty is exhibited in any of its parts.

6. Another important duty of a locomotive engineer is impartiality in selecting steady and efficient men for the various duties to which they are required, and to show to the directors that a trifle more paid for proper qualifications is soon returned by means of public estimation.

# DUTIES, &c., OF ENGINE DRIVERS.

- 1. They ought to be active sober men, and not afflicted with any bodily ailment, as shortness of sight, deafness, fits, faintings, &c., whereby the lives of passengers are endangered beyond the reach of their control.
- 2. They ought to be perfectly familiar with all the various parts of a locomotive engine, so that, by watchful care, they may be the means of preventing, in many instances, any particular loss or material expense which might occur with a person unqualified, and not knowing the result of delay.
- 3. They ought to be men of strong nerve, and affable manners, so that, if any accident occur to an engine, causing a stoppage on some desolate part of the line, he may, in a great measure, prevent dissatisfaction amongst the passengers, by his active endeavours and intelligent conversation.
- 4. Their daily duties are, strict attention to their engines,—a careful look out upon the line,—and punc-

tual attention to the signals, whereby order is maintained, and safety secured.

### DUTIES OF STOKERS.

The duties of stokers are very similar to those of engine drivers, and they ought to possess similar bodily qualifications; indeed, their duties are so much alike, that the term stoker might with propriety be changed to sub-engine driver. Their particular duties at each end of a journey are, to see the fire properly cleaned and filled up, the tubes swept, the engine cleaned and properly lubricated, the tender supplied with the necessary quantity of coke and water, by which the return journey may be resumed with safety, during which time they must attend to the fire, keep a good look out, and attend to the break.

These constitute the chief outlines of the various duties and qualifications of locomotive engineers, engine drivers, and stokers; but there are other minutiæ to which they must attend, which can only be ascertained by practice from particular localities, and by the laws of the different railways and companies to which they belong.

#### SIGNALS.

Signals in general use upon railways, and which must be attend to:

A small red flag stuck in the ground upon the left side of the line the engine is upon signifies to go easy, that all is not right.

A red flag at the station by day, or a red light exhibited by a lantern at night, is to signify that passengers are waiting, and the train must be stopped.

A white flag at a station by day, or a white light exhibited by a lantern at night, signifies—no person waiting,—all right,—go on with safety.

A green flag exhibited by day, or a green light at night, signifies—to proceed cautiously—another train is immediately before.

# TABLES OF PARTICULAR UTILITY IN MECHANICAL CALCULATIONS.

# 1.-PROPERTIES OF METALS.

Names of Metals,	Specific Gravity	Weight of a lineal foot I inch square in lbs. avoird.	Weight of a lineal foot 1 inch diam. in lbs. avoird.	Melting point in degrees Fahrenheit,	Direct cohesion . in tons of bars 1 inch sqr.	Proportionate resistance to torsion.
Iron, Cast	7271	3.12	2.45	17977°	8.4	
Iron, Wrought	7631	3.33	2.61		25.0	10.16
Steel	7833	3.39	2.67		57.0	17.06
Copper	8915	3.84	3.02	4587	12.0	4.31
Zinc	7190	3.05	2.39	700	7.4	
Lead	11344	4.93	3,87	612	0.8	1.00
Tin	7292	3.16	2.48	442	2.3	1.44

Iron, Tin, and Zinc, each possess the property, at a red heat, of decomposing water: the other metals do not effect water at any temperature.

The friction of brass on wrought iron without unguents, equal about 1th of the whole weight or pressure upon the surface.—Cast iron on cast iron 1th.—Brass on Brass 1th.—Cast iron on brass 1th, and brass on steel 1th.

```
Cubic inches of
Cast Iron... \times .263 or cylindrical inches \times .2065 = lbs. avoird.
Wrgt. Iron x .276
                                              \times .2168
Steel ..... × .283
                                              \times .2223
                            99
                                                             "
Copper..... \times .3225
                                              \times .2533
                                        "
                            22
                                                             99
Brass..... × .3037
                                              \times .2385
                            "
Zinc.....×.26
                                              \times .2042
                            "
Lead..... × .4103
                                              \times .3223
                                        "
                                                             22
Tin..... × .2636
                                              \times .207
                                                             99
                            "
                                        "
Mercury.... × .4908
                                              \times .3854
                                                             37
```

# PROPORTIONS OF WEIGHT WHICH VARIOUS METALS BEAR TO EACH OTHER.

 Wrought iron being 1

 Cast Iron = .96

 Steel = 1.03

 Copper = 1.17

 Brass = 1.1

 Lead = 1.48

426 cubic inches of cast iron = 1 cwt., and 8520 or nearly 5 cubic feet = 1 ton.

Avoirdupois lbs. multiplied by .009 = cwts., and avoirdupois lbs. multiplied by .00045 = tons.

#### 2.—APPROXIMATE NUMBERS.

French metres multiplied by 3.281 == English feet
cylindrical foot49.1
cubic inch
cylindrical inch
lineal foot 1 inch square434
lineal foot 1 inch diameter341
An imperial gallon of common water = 10
11.2 imperial gallons = 1 cwt.
224 = 1 ton.
1.8 cubic feet $= 1$ cwt.
35.84 = 1 ton.
1 cubic foet $= 6.25$ imperial gallons.
1 cylindrical foot = 5
Cubic feet multiplied by 6.232, or cubic inches multiplied
by $.003607 = imperial gallons$ .

WEIGHT OF A SUPERFICIAL FOOT OF WROUGHT IRON PLATES IN LBS. AVOIRDUPOIS, THE THICKNESS IN PARTS OF AN INCH.

WEIGHT OF A SUPERFICIAL FOOT OF BRASS AND COPPER PLATES, IN LBS. AVOIRDUPOIS, THE THICKNESS BY THE BIRMINGHAM WIRE GAUGE.

# Brass.

No. 10 = 6.18 lbs. No. 13 = 4.12 lbs. No. 16 = 2.75 lbs. No. 11 = 5.5 lbs. No. 14 = 3.43 lbs. No. 18 = 2.04 lbs. No. 12 = 4.81 lbs. No. 15 = 3.1 lbs.

# Copper.

No. 10 = 6.5 lbs. No. 13 = 4.34 lbs. No. 16 = 2.9 lbs. No. 11 = 5.8 lbs. No. 14 = 3.6 lbs. No. 18 = 2.15 lbs. No. 12 = 5.08 lbs. No. 15 = 3.27 lbs.

A TABLE CONTAINING THE SQUARE IN INCHES, SQUARE IN FEET, AREA IN INCHES, AND AREA IN FEET OF CYLINDERS FROM 12 TO 16 INCHES DIAMETER, AND ADVANCING BY AN EIGHTH.

Dia- meter.	Square in Inches.	Square in feet.	Area in inches.	Area in feet.	Area in French square metres
12 in. 12 in. 12 in. 12 in. 13 in. 14 in. 14 in. 15	144 147.0156 150.0625 153.1406 156.25 169.3906 162.5625 165.7656 169.7656 172.2656 175.5625 178.8906 189.0625 185.6406 189.0625 199.5156 203.0625 213.8906 210.25 221.2656 222.7656 228.7656 228.7656 240.25 244.1406 248.0625 252.0156	1 1.0291 1.0504 1.0719 1.0937 1.1157 1.1379 1.1603 1.2829 1.2522 1.2757 1.2994 1.3234 1.3476 1.3720 1.3966 1.4214 1.4464 1.4717 1.4972 1.5229 1.52488 1.5750 1.6013 1.6279 1.6547 1.7089 1.7364 1.7641 1.7641 1.7920	113,0976 115,4660 117,8590 120,2766 122,7187 125,1854 127,6765 130,1923 132,7326 135,2274 137,8867 140,5007 143,1391 145,48921 145,48921 145,66995 159,4852 162,2956 165,1303 167,9896 170,8735 173,7820 176,7150 179,6725 182,6545 185,6612 188,6923 191,7480 194,8282 197,9330	.7854 .8062 .8249 .8418 .8589 .8762 .8937 .9113 .9217 .9451 .9651 .9651 .0394 1.0205 1.0394 1.0690 1.0968 1.1163 1.1360 1.1558 1.1759 1.1961 1.2271 1.2271 1.2271 1.2576 1.2986 1.3421 1.3637 1.3865 1.3865 1.3865 1.3865	.07296 .07508 .07608 .07608 .07620 .07979 .08139 .08302 .08466 .08562 .08797 .099656 .09931 .10149 .10370 .10553 .10737 .10924 .11111 .11300 .11399 .11688 .11877 .12073 .12468 .12871 .12871

#### REMARKS ON THE CONSTRUCTION OF RAILWAYS.

It is of the utmost practical utility in the construction of railways, that they should be as straight and level as possible, decidedly giving way to a trifling augmentation in length, with gentle curves, rather than introduce heavy inclines, of any material length, the injurious effects of which have been fully demonstrated by the unprofitable working of the Leeds and Selby line.

From Selby, this line is nearly level for about  $6\frac{1}{2}$  miles, on which engines with 12 inch cylinders, 18 inch stroke, and 5 feet driving wheels, can easily transport 30 loaded waggons, each about  $4\frac{1}{2}$  tons in weight, or gross load of about 135 tons, not including engine and tender; but on arriving at the end of this  $6\frac{1}{2}$  miles, an incline commences, of about 7 miles in length, having a rise of 1 in 137, or nearly 39 feet per mile, and on which the same description of engine can take no more than ten waggons at an equal velocity, with safety to keep clear of after trains.

In the first outset of this line, it was contended in its favour, that the principal transport of heavy goods was down the incline, and empty waggons or lighter goods in return, but practice has declared this to be of little advantage, as the amount of wages for breaksmen, and the danger arising from accumulated momentum of the train, more than compensated for the extra expense of fuel upon a level line, which could have easily been obtained, and which has been ultimately and advantageously opened through, by the York and North Midland Company; its extra length, from Selby to Leeds, being only about 3 miles.

It is at present contended by some of our most celebrated engineers, that a series of severe gradients, varying from 30 to 40 feet per mile, is, and may be, advantageously introduced, for which the North Union Railway has been quoted in support of the assertion, 5 miles of which out of 22 being gradients of 1 in 100, and worked at less expense than the Grand Junction Railway. This, I have no doubt, is, and may be, the case, where short gradients can be obtained, the loads generally light, and where a velocity can be maintained of at least 30 miles per hour; but I have no hesitation in asserting it as my opinion, that on a level line of railway there is considerably less danger, and less expense for locomotive power, than on any other.

Another essential property a railway ought to possess is stability, for which reason the nature of the soil and the probable weight of the trains ought to be properly considered. Where the earth is firm and stone at hand, blocks of about 2 feet square and 1 foot in thickness may be laid three feet from centre to centre, on which to support rails of at least 60 lbs. per yard, with advantage; but where the ground is soft, the blocks sink by the vertical weight of the trains and deflection of the rails; they also become loosened by the lateral pressure, or oscillating motion of the engines: when such is the case, a considerable degree of expense is constantly incurred by having to remove the earth from around the stones.

Sleepers, or cross sectional pieces of timber, are also liable to give frequently very unequal support to the rails; but on account of not having the earth to remove, they are much easier to repair; and again, two chairs

being placed on each piece of timber, or sleeper, the line is not so easily affected by lateral pressure; but I should say that continued bearings of timber possess a degree of firmness superior to either the one or the other of the preceding, first, because being one continued bearing, by which the rails are equally supported throughout, and also the timbers being bound together, by cross sectional pieces, they are not so liable to sink, or become loosened by either vertical or lateral pressure; and secondly, the timbers being straightened upon the upper side to a broad flat surface, admits of rails which constitute both chairs and rails, consequently, they are considerably lowered in height, and the lateral pressure of the engines more firmly resisted.

As there is only one railway at present in this country of that description, namely, the Great Western, it may not be out of place to notice the mode of its construction, which is as follows:

The width between each rail, or what is generally termed the gauge of the rails, is 7 feet, other lines being in general 4 feet 81 inches.

At every 15 feet in length along this line of railway, beech piles are driven into the ground, at 15 feet apart transversely; in cuttings, they are driven into the ground from 8 to 10 feet, according to the nature of the soil; and in embankments, they are generally made of sufficient length to pass through the embankments, and 8 or 10 feet into the original ground on which it is raised.

To these piles double and single transverse ties, or sleepers of American pine, are attached in the following manner:—A square recess is cut  $1\frac{1}{2}$  inches into the pile on one side for single ties, and on the both sides for

The single ties are 6 inches broad and 9 double ones. inches deep; the double ties are 6 inches broad and 7 inches deep; each being securely fixed to the piles by On these sleepers are laid longitudinal timbers of American pine, 15 inches broad and 7 inches thick, and bolted firmly to each other; and thus the line is of one continued frame from end to end. The line is then ballasted, and the longitudinal timbers packed, or rammed in the usual manner, with fine sand or gravel, until each 15 feet length is raised in the middle about half an inch; the timber is then planed to a uniform surface. after which planks of elm, oak, or ash 14 inches thick and 8 inches in breadth is fixed down by spikes; the upper surface of the planks are afterwards planed, so as to slope inwards about \$ths of an inch; and to these planks the rails are screwed, with a thickness of felt underneath, by which means the unpleasant rumbling noise so justly complained of on many railways, is on this almost completely avoided.

One decided advantage acquired in this form of construction consists in the piles being a constant retaining power, holding the road down against the packing, which has always a tendency to raise it up. It is asserted that the earth may be rammed under the timbers until the upward pressure, or resisting force, equal about one ton per square foot,—Hence the following advantage over stone blocks:—A stone of the usual description employed for that purpose contains about 4 cubic feet, and weighs only about a quarter of a ton, and suppose the impact with which the stone is forced into its seat be taken into account, which is a very uncertain quantity, but say half a ton, leaves a very decided claim in favour of longitudinal bearings.

The timber used in a mile of this railway is about 420 loads of pine, and 40 loads of hardwood. Of iron, 6 tons of bolts, and 30,000 wooden screws, 2 inches in length. The rails are about 44 lbs. per yard, but evidently too light, and would be much better from 50 to 55. In the present form, the cost per mile from London to Maidenhead, including laying, ballasting, sidings, draining, &c., is stated at £9,200 per mile, railways of other or more common descriptions having cost £10,000, and varying, with unfavourable circumstances, to £50,000 permile, as exhibited in the following table.

NAMES.	Estimate.	Cost.	Royal Assent.	Capital Cost.
2.75	£	£		77.75
Ballochney	18,431	38,431	May, 1826	2,09
Dundee and Newtyle	30,000		Do.	5.67
Edinburgh & Dalkeith	70,125	133,053	Do.	1.90
Glasgow & Garnkirk	28,479	148,195	Do.	5.12
Liverpool & Manchester	510,000	1,465,000		2,88
Clarence	100,000	500,000	May, 1828	3.00
Newcastle & Carlisle	300,000	750,000	May, 1829	2.50
Leeds and Selby	210,000	340,000	May, 1830	1.62
Leicester & Swannington	90,000			1.94
Manchester and Bolton.	204,000		Aug., 1831	3.19
Belfast and Cavehill	7.500		April, 1832	5.15
		5,500,000	May, 1833	2,20
London and Greenwich.	400,000		Do.	1.83
		1,906,000		1.84
Whitby and Pickering	80,000	135,000		1.69
Durham Junction	80,000	130,000	June, 1834	1.63
		1,860,000		1.86
Darham & Sunderland.	102.000	256,000		2.51
London and Croydon	140,000		June, 1835	4.12
Brandling Junction	110,000		Do. 1836	3.05
		Mean	-	2.79

Part of the Hull and Selby line of railway is of a similar construction to the Great Western, but without the piles, and is said to give entire satisfaction, hence a comfortable road with a considerable degree of saving in the first cost.

The angle of repose upon railways, or that incline on which a carriage would rest in whatever situation it was placed, is said to be at 1 in 280, or nearly 19 feet per mile; at any greater rise than this, the force of gravity overcomes the horizontal traction, and carriages will not rest, or remain quiescent upon the line, but will of themselves run down the line with accelerated velocity. The angle of practical effect is variously stated, ranging from 1 in 75 to 1 in 330.

The width of land required for a railway must vary with the depth of the cuttings and length of embankments, together with the slopes necessary to be given to suit the various materials of which the cuttings are composed: thus, rock will generally stand when the sides are vertical; chalk varies from  $\frac{1}{6}$  to 1, to 1 to 1; gravel  $1\frac{1}{2}$  to 1; coal  $1\frac{1}{2}$  to 1; clay 1 to 1, &c.; but where land can be obtained at a reasonable rate, it is always well to be on the safe side.

The following table is calculated for the purpose of ascertaining the extent of any cutting in cubic yards, for 1 chain, 22 yards, or 66 feet in length, the slopes or angles of the sides being those which are most in general practice, and formation level equal 30 feet.

SLOPES 1 TO 1.

Depth of cutting in feet.	Half width at top in feet.	Content in cubic yards per chain.	Content of 1 perpendi- cular foot in breadth.	Content of 3 perpendi- cular feet in breadth.	Content of 6 perpendi- cular feet in breadth.
1	16	75 78	2.44	7.33	14 67
2	17	156 42	4.89	14.67	29 33
3	18	242,00	7.33	22.00	44.00
4	19	332.44	9 78	29.33	58.67
5	20	427.78	12.22	36.67	73.33
6	21	528 00	14.67	44 00	88,00
7	22	633 11	17.11	51.33	102.67
8	23	743.11	19.56	58.67	117.33
9	24	858 00	22.00	66.00	132.00
10	25	977.78	24 44	73 33	146.67
11	26	1102 44	26.89	80.67	161.33
12	27	1232.00	29 33	88.00	176.00
13	28	1366.44	31.78	95.33	190 67
14	29	1505 78	34.22	102,67	205.33
15	30	1650.00	36 66	110.00	220.00
16 17	31	1799.11	39 11	117.33	234.67
18	32	1953 11	41 55	124.67	249.33
19	33	2112 00	43 99	132.00	264.00
20	34 35	2275.78	46.44	139.33	278.67
21		2444 44	48.89	146.67	293.33
22	36	2618.00 2796.44	51.33	154.00	308.00
23	38	2979 78	53.77	161.33	322.67
24	39	3168 00	56 21 58 66	168.67	337 33
25	40	3361.11	61.10	176.00 183.33	352 00
26	41	3599 11	63 55	190.67	366.67 381.33
27	42	3762 00	65.99	198.00	396.00
28	43	3969 78	68.43	205.33	410.67
29	44	4182.44	70 88	212,67	425.33
30	45	4400.00	73.32	220.00	440.00
31	46	4622 44	75.77	227.33	454.67
32	47	4849.78	78.22	234.67	469 33
33	48	5082.00	80.67	242.00	484.00
34	49	5319.11	83.11	249,33	498.67
35	50	5561.11	85.55	256,67	513.33
36	51	5808.00	88 00	264.00	528 00
37	52	6059 78	90.44	271.33	542 67
38	53	6316 44	92 39	278 67	557.33
39	54	6578 00	95.33	286.00	572.00
40	55	6844 44	97.77	293.33	586.67
41	56	7115.78	100.22	300.67	601.33
42	57	7392.00	102.66	308.00	616.00
43	58	7673.11	105 11	315.33	630 67
44	59	7959.11	107.55	322,67	645 33
45	60	8250.00	109 99	330.00	660 00
46	61	8545 78	112.44	337.33	674.67
47	62	8846.44	114 88	344.67	689.33
48 49	63	9152 00 9462.44	117.33	352.00	704.00
50	65	9777.78	119 77	359.33	79 817 58.887

SLOPES  $1\frac{1}{2}$  TO 1.

Depth of cutting in feet.	Half width at top in feet.	Content in cubic yards per chain.	Content of 1 perpendi- cular foot in breadth.	Content of 3 perpendi- cular feet in breadth,	Content of 6 perpendi cular feet in breadth.
1	161	77.00	2.44	7.33	14.67
2	18	161.33	4.89	14.67	29.33
3	191	253.00	7.33	22.00	44.00
4	21	352.00	9.78	29.33	58.67
5	221	453.33	12.22	36.67	73.33
6	24	572.00	14.67	44.00	88.00
7	251	693.00	17.11	51.33	102.67
8	27	821.33	19.56	58.67	117.33
9	281	957.00	22.00	66.00	132.00
10	30	1100.00	24.44	73.33	146.67
11	314	1250.33	26.89	80.67 88.00	161.33 176.00
12 13	33	1408.00 1573.00	29.33 31.78	95.33	190.67
14	34½	1745.33	34.22	102,67	205.33
15	371	1925.00	36.66	110.00	220,00
16	39	2112.00	39.11	117.33	234.67
17	401	2306.33	41.55	124.67	249.33
18	42	2508.00	43 99	132.00	264.00
19	434	2717.00	46.44	139.33	278.67
20	45	2933,33	48.89	146.67	293.33
21	465	3157.00	51.33	154.00	308,00
22	48	3388.00	53.77	161.33	322.67
23	494	3626.33	56.21	168 67	337.33
24	51,	3872.00	58.66	176.00	352.00
25	522	4125.00	61.10	183 33	366.67
26	54	4385,33	63.55	190 67	381.33
27	553	4653.00 4928.00	65.99 68.43	198.00 205 33	396.00 410.67
28 29	57 581	5210,33	70.88	212.67	425.33
30	60	5500,00	73.32	220 00	440.00
31	614	5797.00	75.77	227.33	454,67
32	63	6101.33	78.22	234.67	469.33
33	644	6413,00	80.67	242.00	484,00
34	66	6732.00	83,11	249.33	498,67
35	672	7058.33	85.55	256.67	513.33
36	69	7392.00	88.00	264.00	528,00
37	704	7733.00	90.44	271.33	542.67
38	72	8081,33	92.39	278.67	557.33
39	734	8437.00	95.33	286 00	572.00
40	75	8800.00	97.77	293.33	586.67 601.33
41	761	9170.33 9548.00	100.22 102.66	300.67	616,00
42	78	9933.00	105.11	315.33	630.67
44	81	10325.33	107.55	322.67	645.33
45	824	10725.00	109.99	330.00	660.00
46	84	11132.00	112.44	337.33	674.67
47	851	11546.33	114.88	344.67	689.33
48	87	11968.00	117.33	352.00	704.00
49	884	12397.00	119.77	359.33	718.67
50 /	90	12833.33	122.21	366.67	733.33

SLOPES 2 TO 1.

Depth of cutting in feet.	Half width at top in feet.	Content in cubic yards per chain.	Content of 1 perpendi- cular foot in breadth.	Content of 3 perpendi- cular feet in breadth.	Content of 6 perpendi- cular feet in breadth.
1	17 1	78.22	2.44	7.33	14.67
2	19	166.22	4.89	14.67	29.33
. 3	21	264.00	7.33	22.00	44.00
4	23	371.55	9.78	29.33	58.67
5	25	488.89	12.22	36.67	73.33
6	27	616.00	14.67	44.00	88,00
7	29	752.89	17.11	51.33	102,6
8	31	899.55	19.56	58.67	117.33
9	33	1056.00	22.00	66.00	132.00
10	35	1222.22	24,44	73.33	146,67
11	37	1398.22	26.89	80.67	161.33
12	39	1584.00	29,33	88.00	176.00
13	41	1779.55	31.78	95.33	190,67
14	43	1984.89	34.22	102.67	205.33
15	45	2200.00	36.66	110.00	220.00
16	47	2424.89	39.11	117.33	234.67
17	49	2659.55	41.55	124,67	249.33
18	51	2904.00	43.99	132.00	264.00
19	53	3158.22	46.44	139,33	278,67
20	55	3422.22	48.89	146,67	293,33
21	57	3696.00	51.33	154.00	308.00
22	59	3979.55	53.77	161.33	322,67
23	61	4272.89	56.21	168.67	337,33
24	63	4576.00	58.66	176.00	352.00
25	65	4888.89	61.10	183.33	366,67
26	67	5211.55	63.55	190.67	381,33
27	69	5544.00	55.99	198.00	396.00
28	71	5886.22	68.43	205.33	410.67
29	73	6238,22	70.88	212.67	425.33
30	75	6600.00	73.32	220.00	440.00
31	77	6971.55	75.77	227.33	454.67
32	79	7352.89	78.22	234.67	469.33
33	81	7744.00	80.67	242.00	484.00
34 35	83	8144.89	83.11	249.33	498.67 513.33
36	85 87	8555.55	85.55	256.67	
37	89	8976 00 9406.22	88.00 90.44	264.00 271.33	528,00 542,67
38	91	9846,22	92,39	278.67	557.33
39	93	10296.00	95.33	286.00	572.00
40	95	10755.55	97.77	293.33	586.67
41	97	11224.89	100.22	300.67	601.33
42	99	11704.00	102.66	308.00	616,00
43	101	12192.89	105.11	315.33	630.67
44	103	12691.55	107.55	322.67	645.33
45	105	13209.00	109.99	330.00	660.00
46	107	13718.22	112,44	337.33	674.67
47	109	14246.22	114.88	344.67	689.33
48	111	14784.00	117.33	352.00	704.00
49	113	15331.55	119.77	359,33	718,67
50	115	15888.89	122.21	366.67	733.33

By the fourth, fifth, and sixth columns in each table, the number of cubic yards is easily ascertained at any other width of formation level above or below 30 feet, having the same slopes as per tables, thus:—

Suppose an excavation of 40 feet in depth, and 33 feet in width at formation level, whose slopes or sides are at an angle of 2 to 1, required the extent of excavation in cubic yards—

$$10755.55 + 293.33 = 11048.88$$
 cubic yards.

The number of cubic yards in any other excavation may be ascertained by the following simple rule:—

To the width at formation level in feet, add the horizontal length of the side of the triangle formed by the slope, multiply the sum by the depth of the cutting, or excavation, and by the length, also in feet; divide the product by 27, and the quotient is the content in cubic yards.

Ex.—Suppose a cutting of any length, and of which take 1 chain, its depth being  $14\frac{1}{4}$  feet, width at the bottom 28 feet, and whose sides have a slope of  $1\frac{1}{4}$  to 1, required the content in cubic yards,

$$14.5 \times 1.25 = \overline{18.125 + 28} \times 14 = 645.75 \times 66$$
  
=  $\frac{42619.5}{27} = 1578.5$  cubic yards.

Note.—English cubic yards multiplied by .7646 = French cubic metres, and French cubic metres multiplied by 1.308 = English cubic yards.

# ON THE DIMINUTION OF FRICTION BY RAPID MOTION.

(From the Inventors' Advocate of Industry.)

Time is an essential element in the consideration of pressure as well as of motion; and the weight or bearing of any body is proportioned to the time which it remains on any given point, thus:-Suppose a ball of any weight or size to be rolled along a flat level surface, at a velocity of ten feet per second, it must press upon every part of the surface moved over with a force proportionate to its weight. Again, if it be rolled at double that velocity, its pressure will be distributed over twice the space in the same time; and, as the weight of the ball remains the same, the amount of force on any given point of its course must be diminished one-half. total amount of pressure exerted in the second of time is the same; but, in the case of the double velocity, the space over which it is spread is doubled, and its intensity is therefore proportionally diminished; and the application of this principle shows clearly the mechanical advantages to be gained by rapid motion in the diminution of friction on railways: for the resistance to the motion of wheeled carriages, caused by friction, increases with the weight or pressure on the axles, and on the surface of the road; therefore, if we diminish the pressure by increasing the rapidity of the motion, we diminish the friction. The effect of increased velocity in diminishing resistance in traversing any given space on

a railway is, however, different on the friction of the axles from the resistance of the surface of the road.

The pressure of the load on the axles of the carriages is constantly the same, because there is, in that case, no distribution of the weight over a larger surface; it has the same point of bearing whatever may be the velocity. The gain in this case depends entirely on the saving of time, for, as the weight, at a double velocity, rests on the points of bearing only half the time, the power required to overcome it is only half, or, what is the same thing, is only required for half the time. advantage gained by diminution of resistance at the circumferences of the wheels, on the contrary, depends on the diminution of pressure. The weight at double the velocity is distributed over twice the surface, consequently its pressure on any given point is only half. The same weight is borne by twice the length of rails in one case that presses on half the length in the other; viewed in relation to time, it is the same in both.

These observations respecting the resistance of the surface only apply to a perfectly level and smooth railway, on which the hindrance to motion from the rails depends principally on adhesion, caused by weight. When the rails are uneven, or when the road inclines, the advantages of rapid motion, so far as the diminution of the surface resistance is concerned, is decreased. On an incline, the weight of the whole train has to be lifted as well as to be drawn, and the increased velocity gives no advantage in lifting a weight. It has, on the contrary, the effect of diminishing the mechanical advantages of the incline plane. For instance, when the velocity is doubled on an incline, the weight is lifted twice the height in the same time, and twice the power

will be required to do it. Viewed in relation to time, there is no loss of power, but the quantity of force required to overcome the obstacle must be increased. When higher velocities, therefore, are required, the importance of having the road level is the greater. A gradient of 1 in 200 is to a train travelling at the rate of twenty miles an hour equal to a gradient of 1 in 100 when the speed is doubled, for the weight will have to be raised twice the height in the same time.

The pressure on the axles remains constant, whether the motion be rapid or slow, up hill or down; and it is in this friction that the great saving of resistance is made by increasing the velocity. The proportion which the resistance to motion from friction of the axles bears to the resistance presented by adhesion, inequalities, and inclines, on the peripheries of the wheels, may be stated at three to one. Putting out of consideration. therefore, the diminished resistance occasioned by diminished weight on the rails, we will take the surface resistance to be in arithmetical ratio to the velocity, and confine our view of the advantages of increasing the velocity to the diminution of axle-friction only. It is not that we think the diminution of the surface resistance unimportant that we leave it out of consideration, but because its amount must depend greatly on the state of the road. In axle-friction alone there would be a gain of power to the amount of nearly seventy per cent. by doubling the velocity, and of one hundred per cent. if it were trebled, whilst the loss arising from increased resistance by the air would be only in the proportion of 18 to 14.

For instance, if the force required to move a train at the rate of twenty miles an hour be 400 lbs., the obstruction of the road would absorb 100 lbs. of the power, and the friction of the axles 300 lbs. At double the speed, the power required would be 300 lbs. for axle-friction, and 200 lbs. for road resistance, being together 500 lbs.; and at the speed of sixty miles an hour the power required would, in the same manner, be 600 lbs. In the same time, however, the train would be propelled in the latter case three times the distance by the 200 lbs. additional power, omitting from consideration the increased resistance of the air.

It may be objected to this calculation of the advantages to be gained by rapid motion, that experience on railways proves the reverse of gain to accompany increase of speed. This result, however, does not prove the unsoundness of the principle for which we are contending, but the defective construction of locomotive engines for rapid motion. If that objection be allowed against the theory of diminished resistance to motion at increased velocities on railways, it would be equally applicable to passage boats on canals, where the fact has been proved, and proved, too, in apparent opposition to the established law of the resistance of fluids. Though a speed of ten or twelve miles an hour on canals has been proved to occasion much less proportionate resistance than a speed of six or seven miles an hour, the slower speed is preferred, because the moving power is not adapted for greater velocities. It is the same with the present locomotive engines as with animal power. They are not adapted for very rapid motion, and when it is attempted, a great sacrifice of steam power, is the consequence. Even at the velocities common to the slowest trains on railways, a great loss of power results. owing to the construction of the engines not being fitted

for imparting rapid motion. An engine which would draw a train of sixty tons at the rate of twelve miles an hour, is not able to draw more than forty tons at fifteen miles an hour; and at a velocity of twenty miles an hour its power is reduced to drawing twenty tons only. Thus, an addition of eight miles an hour to the speed diminishes the power of the engine two-thirds. effect is to be ascribed entirely to the imperfect construction of locomotive engines, and does not arise from the increased resistance of the air, or friction consequent on rapid motion. If an engine were constructed, able to exert its power advantageously at great velocities, we have no doubt that the advantages gained by increasing the velocity would fully equal our estimate. The power to be employed at higher rates of speed must necessarily be greater than at slower velocities, but the advantage gained by diminishing the time of its action would far exceed the increase of power required.

# Table of Railways, with the Time of Opening, and the Gauge of Rails.

•		
RAILWAYS. Belfast and County Down. Royal assent	Date of opening.	Gauge.
Belfast and County Down. Reyal assent	June 26, 1846	5 st. 6 in.
Birkenhead, Lancashire, and Cheshire Jun	IC-	
tion. Opened from Chester to Birkenhead		4 ft. 8} in.
Bolton, Blackburn, Clitheroe, and West Yor	k-	-
shire. Royal assent	.June 30, 1845	4 ft. 81 in.
Bristol and Exeter. Opened throughout	Mav 1. 1844	ft. o in.
Bristol and South Wales. Royal assent		
Caledonian. Royal assent		
Chard Canal Railway. Royal assent		
Chester and Holyhead. Royal assent	.July 4, 1844	4 ft. 81 in.
Cockermouth & Workington. Op.throughout.		
East Anglian. Opened from Ely to Lynn		
Eastern Counties. Opened throughout		
East Lancashire. Partially opened		
Eastern Union. Opened to Bury St. Edmund's	Dec. 1846	4 ft. 81 fn.
Exeter and Crediton. Royal assent		
Exeter and Exmouth. Royal assent		
Great North of England. Opened throughout.		ft. 8} in.
Great Northern. Royal assent		
Great Southern and Western, (Ireland.) Roy		a ite og me
assent		K & • fm
Huddersfield and Manchester Railway as		0 16 0 III.
Canal. Royal assent		4 8 01 4-
Hull and Selby. Opened throughout		
Kendal and Windermere. Opened throughou		# 10. 08 III
Lancashire and Yorkshire, (late the Manche		4 0 0 1
ter and Leeds.) Opened throughout		
Lancaster and Carlisle. Opened throughout	Dec. 1846	4 It. 84 In.
Lancaster and Preston Junction. Open		
throughout		
Leeds and Bradford. Opened to Leeds		
Leeds, Dewsbury, and Manchester. Royal asset		
Leeds and Thirsk. Royal assent		in. 84 in.
Liverpool, Crosby, and Southport. Length,		
miles 4 furlongs 8 chains		4 ft. 8½ in.
Liverpool, Manchester, and Newcastle-upo		
Tyne. Royal assent		
London and Blackwall. Opened throughout		
London, Brighton, and South Coast. Opened		
London and Greenwich. Opened throughout.		4 ft. 8} in.
Manchester, Buxton, Matlock, and Midlan		
Reyal assent		4 ft. 81 in.
Manchester, Sheffield, & Lincolnshire. Open		
from Manchester to Sheffield		
Maryport and Carlisle. Opened throughout	Jan., 1845	4 ft. 81 in.

## LOCOMOTIVE ENGINE.

Midland. Opened throughoutJuly	1, 1840 4 ft. 8 in.
Midland, from Gloucester to Bristol, 371 miles	7 ft. 0 in.
Newcastle-upon-Tyne and Carlisle. Opened	
throughoutJune	18, 1839 4 ft. 81 in.
Newmarket. Royal assentJuly	16, 1846 4 ft. 81 in.
Norfolk. Opened throughoutMay	
North Staffordshire. Royal assentJune	
North Union. Opened throughoutOct.	
North Wales. Royal assentJuly	
North Western. Royal assentJuly	
Oxford, Wercester, and Wolverhampton. Royal	20, 2020
assent	4. 18457 ft. 0 in.
Oxford, Worcester, and Wolverhampton: also	<b>-,</b>
an additional line between Worcester and	
Wolverhampton	4 ft. 81 in.
Preston and Wyre. Opened throughoutJuly	20, 1840 4 ft. 81 in.
Shrewsbury and Birmingham. Royal assentAug.	
Shrewsbury and Chester. Partially opened Nov.,	
Shrewsbury and Hereford. Royal assentAug.	
South Devon, (atmospheric.) Partially opened May	
South Eastern. Opened throughoutFeb.	6, 18444 ft. 84 in.
South Wales. Royal assent	
St. Helen's Canal and Railway. Royal assent	18304 ft. 84 in.
Stockton and Darlington. Opened throughout. Sept.	
Taff Vale. Opened throughout	
Vale of Neath. Royal assent	
Wear Valley. Royal assentJuly	
West Cornwall. Royal assent	
West London. Opened throughoutMay	
West London. Opened throughoutMay	
Whitehaven Junction. Opened throughout Jan.	
Wilts, Somerset, and Weymouth. Royal assent June	
York, Newcastle, & Berwick. Op. throughout. June	
York and North Midland. Op. throughoutJune	50, 1540 4 It. 84 ID.

# TOTALS OF MILES SANCTIONED IN THE UNITED KINGDOM, SPECIFYING THE DIFFERENT WIDTHS OF GAUGE.

	MILES.
Seven feet, or broad gauge	. 1318
Five feet three inches, or Irish gauge	. 1624 <del>1</del>
Four feet eight-and-a-half inches	. 8762 <del>1</del>
Total	11 7058

### EMPLOYMENT AFFORDED BY RAILWAYS.

From a return of the number and description of persons employed on the railways of the United Kingdom, (open for traffic,) on the 1st of May, 1847, it appears there were employed on 74 railways, comprising an extent of 3305 miles, 47,218 persons, in the various departments, as follows:—

Secretaries, Managers, and Trea-   Artificers	0,800
surers 124 Switchmen	.1011
Engineers 96 Policemen, Porters, and Messer	i-
Superintendents	
Storekeepers 91 Piatelayers	
Accountants and Cashiers 100 Labourers	2.492
Draughtsmen 100 Gate-keepers	
Clerks	
Foremen 828 Breaksmen	
Enginemen or Drivers, and Assistants 2969 Miscellaneous	
Conductors or Guards 1163 Total	7 910

From a similar return respecting 128 lines and branches in course of construction at the same period, comprising an extent of 6455 miles, it appears there were 256,509 persons employed, as follows:—

Secretaries and Managers 235	Miners or Quarrymen6741
Treasurers 84	Feremen
Engineers 549	
Superintendents & Storekeepers 2382	Porters, Servants, or Watchmen 16
Accountants and Cashiers 264	Platelayers 876
Draughtsmen and Clerks 1437	
Artificers and Labourers240,301	Miscellaneous 487
Inspectors 158	<del></del>
Land Surveyors 32	Total256,509

Giving a grand total of 303,717 persons employed on railways during a portion of the past year.

# THE NARROW GAUGE FASTER THAN THE BROAD.

The writer of a pamphlet under this head shows, by a series of tables, that the average rate of speed on the London and North Western, is to Wolverhampton 26.92 miles per hour, and to Birmingham 24.28; that on the South Western to Southampton, it is 25.29 miles per hour; while on the Great Western to Swindon, it is only 24.97 miles per hour, and to Bristol 23.97.

## IMPROVEMENT IN LOCOMOTION.

An invention has recently been projected by Mr. E. Galloway, which promises to supply a most serious desideratum in the present construction of locomotive engines, and to exercise a very important influence on the progress of locomotion generally. It has long been acknowledged that one of the greatest difficulties with which the railway steam engine had to contend was that of acquiring a bite upon the rails superior to that supplied by gravitation. The amount of nipping or biting power derived from that principle by the verticle driving wheel now in use has been found quite insufficient in foggy weather, when the rails are in a greasy state from the moisture upon them, and upon inclines with severe gradients. Under such circumstances the driving wheel slips and the engine makes little or no progress. Mr. Galloway's invention is principally intended to overcome this difficulty in working the present locomotive engine, and from the experiments made the other day, first with a working model at the western gallery of Hungerford Market, and afterwards on the Great Western Railway, at Mailenhead, there appears to be very little doubt as to its complete success. The invention consists in adding two driving wheels, horizontal or inclined, to the present locomotive; these wheels acting on each side of a middle rail laid between the ordinary rails, and being pressed simultaneously against the opposite sides of the rail by means of adjusting screws acting upon springs with any required degree of force. By such an arrangement it is manifest that a bite or adhesion may be obtained far beyond what is due to the weight of the engine, and that

thereby the difficulties may be obviated which at present arise from greasy rails and heavy gradients. Galloway contemplates the application of his invention to engines as at present constructed with vertical driving wheels, and expresses his conviction that such a combination will not be found inconsistent with high velocity. In the meantime, however, he has, we think, prudently confined himself to demonstrating the efficiency of the horizontal driving wheels, unaided by vertical driving wheels, in overcoming steep inclines. Hungerford Market, the working model with horizontal driving wheels went with great ease up an incline of 1 in 6, and the following statement, drawn up by Mr. Gooch, locomotive superintendent of the Great Western Railway, with reference to experiments made on a previous day, apply equally to the results of those made at Maidenhead :---

"The following is the result of the experiment I made with Mr. Galloway's locomotive engine, in which the driving wheels are placed horizontally, and act against the sides of a centre rail:—

> > 33<del>1</del>

"This weight was taken at a slow speed up an incline of 1 in 19 with a pressure on the boiler of 60 lbs. on the inch, and calculating the power of the engine and actual duty performed, we have as follows:—With steam at 60 lbs. in the boiler, the average effective pressure in the pistons, after deducting back pressure, will be about 50 lbs. on the inch, then the area of the two cylinders  $308 \times 50 = 15,400$  lbs., and double stroke of piston equal 32 inches, and circumference of driving wheel 116 inches. Therefore, as 116 inches: 15,400 :: 32 : 4,248 tractive power on the rim of the wheel. And gravity per ton 1 in 19 = 118 lbs. Friction ditto 7 lbs.  $125 \times 33.5$  tons = 4187 lbs. Resistance overcome.

"Therefore, 4248 — 4187 = 61 lbs., the total loss from the friction of the working parts of the engine, which I think is as small a loss as can be hoped for any class of engines. And from the facility of applying screws to increase the weight on the driving-wheels to any required amount, there is no difficulty from slipping.

### "DANIEL GOOCH.

"In explanation of the preceding, it is necessary to state that the former diameter of the driving-wheels of the experimental engine was eight feet, and the horizontal ones are three feet. The tractive power of the engine before alteration was about 1600 lbs. The increase of tractive force, therefore, is as 4187 lbs.: 1600 lbs."

It is also only fair to explain, that the experiment was made with "Bacchus," the oldest engine in the company's possession, and long ago worn out and disused. The leading advantages claimed by Mr. Galloway for his invention are, that the adhesive power, being independent of gravity, can be adjusted according to the gradient or load, while the train is in motion; that by applying a brake at once to the middle rail, the train, in descending any gradient, may be retarded independently of the wheels, and also the risk of collisions be avoided; that sharp curves may be traversed almost as easily and quite as safely as straight lines; that punctuality on railways will thereby be better secured, and the necessity for tunnelling, heavy cuttings, and embankments to a great degree obviated.

Whether all or any of these advantages will be secured by Mr. Galloway's invention, it must remain for a course of detailed practical experiments to decide; but in the meantime the credit of a very ingenious, a very simple, and, to all appearances, a very practicable contrivance, cannot be denied to him. The difficulties which he claims to have overcome have for many years

occupied the attention and eluded the ingenuity of engineers. Some time ago the notion of a centre rail and a horizontal driving wheel was projected by Mr. Vignolles and Mr. Errixon, but as they only proposed applying it on the one side of the rail, they were un-Mechanical contrivances of a similar character have since been attempted both in this country and abroad, but they have always turned out to be failures, and if Mr. Galloway's invention can be combined with the present construction of the locomotive, so as to fulfil his expectations in regard to it, the only wonder will be how, for upwards of 16 years, so really simple an expedient for obviating admitted difficulties could have escaped undiscovered. Mr. Galloway states, that he can secure on the narrow gauge, horizontal or inclined, driving wheels of six feet diameter, and on the broad gauge eight feet, so as to act in conjunction with the verticle driving wheels. He states, too, that this is practicable at a very moderate expense.

### THE NEW RAILWAY ACT,

11TH OF VICTORIA, CAP. 8,

CAME INTO OPERATION ON MONDAY, DECEMBER 20, 1847.

The preamble states that divers Acts of Parliament have been passed for making railways, and in such acts respectively certain periods of time are limited within which only the powers thereby granted, whether for making the railways, or for the compulsory purchase of the lands therein referred to, could be lawfully exercised, and that it is expedient in certain cases to grant further time for the purposes mentioned. It is now enacted that if any railway company desire that the period limited by the act or acts passed should be extended. they may within two months after the passing of the act (on the 20th December, 1847,) make application, in writing, to the Commissioners of Railways, setting forth what extension of time is desired, and to what part of the railway, or the works or lands connected therewith, the same is intended to apply, and the grounds on which such application is made. The commissioners may require a company so applying to give notice of the application by advertisement in the London Gazette, in a newspaper, and on the door of the parish church in which the railway works or land are situated, and objectors may make their complaints before the commissioners. On proof that notice has been given, and after hearing any objections, the commissioners may extend the time for a period not exceeding two years

from the expiration of the period allowed by the acts already passed. Existing contracts and notices to take lands are to be construed as if the act had not passed. Within a month after the warrant to extend the time is granted, the same is to be advertised, and parties aggrieved by such extension may have awarded to them compensation for additional damage (if any) sustained by such extension of time being granted. The principal alterations in the measure have been made in the eighth and two following provisions. It is now declared that no railway company authorized to construct a railway or any works connected with a railway who had not before the 27th of November last executed any part of the works, or entered into any contract or agreement for the execution of any part of the works which they were for the first time authorized by such act to construct, shall within twelve months after the passing of the act enter into any contract or agreement for the execution of any works so for the first time authorized by such act, and also contracts and agreements for the construction of such other works as the company shall be authorized to proceed in constructing by the consent of the holders of three-fifths of the shares or stock held by such of the shareholders of such company as shall signify their assent thereto or dissent therefrom withing the time and in the manner mentioned in the act, or as they shall be authorized to proceed in constructing by an order of the commissioners, duly advertised, and all contracts and agreements entered into in contravention of the enactment "shall be utterly void and of no effect." In order to ascertain the opinion of the shareholders to the making of contracts for new works, it is provided that a general

meeting shall be held within six weeks after the passing of the act, of which public notice shall be given by advertisement and a circular letter sent to the shareholders, stating that a general meeting will be held for the purpose of determining whether a contract for executing such works shall be entered into or not within the twelve months next after the passing of the act. and requesting such shareholder to signify his assent or dissent in the form prescribed by the schedule of the At the meeting, the chairman shall cast up the number or amount of shares or stock held by shareholders dissenting therefrom, whether sent or expressed at the meeting, and such chairman shall thereupon publicly announce the number or amount of shares or stock of the shareholders assenting to the making of such contract, and the number or amount of the shares or stock of those dissenting therefrom. and shall state whether or not the holders of threefifths of the whole of such shares or stock consent to the making of such contract. In order to assent or dissent, a shareholder must have paid the "calls" on the shares. The chairman is to sign a certificate respecting the meeting, which is to be deposited, countersigned by the secretary of the company, in the office of the Commissioners of Railways within one week after holding the meeting; and such certificate, or a copy certified, shall be received as evidence in all courts, and before all justices and others, that such consent was duly given. The concluding clause (the 11th) is the formal one, to amend or repeal the act. In the schedule is the form to be filled up by a shareholder assenting or dissenting to contracts for new works.

### BELGIUM.

### ROYAL DECREE FOR PROVING STEAM-ENGINE BOILERS.

By a decree of King Leopold, dated Oct. 28, 1840, it is ordained:—

- "That every boiler in which the steam is required to have a pressure of more than one atmosphere shall be submitted to a proof of triple the force it will be required to support. This pressure to be determined by the difference between the authorized pressure of the steam in the boiler and atmospheric pressure.
- "Considering that tubular boilers of locomotive engines may safely be exposed to less rigorous proof, on the report of our Minister of the Public Works, we have decreed,
- "Article 1.—That the boilers of locomotive engines intended to run on railroads shall be submitted to a proof of twice the amount those engines are required to support.
- "Art. 2.—The permission to make use of locomotives belonging to the State will be granted after the trials prescribed by the articles of the first and second decree, by the director of the railroads now in operation.
- "Art. 3.—The proof of the locomotive engines shall be renewed at least once a year; they shall take place after every important repair of the boiler. The boilers that are injured during the proof shall not be used.
- "Art. 4.—The director of the railroads in operation shall address to our Minister of the Public Works a duplicate of the permission to use the engines, and of the declarations of proof."

### WORKS BY WILLIAM TEMPLETON.

# PRICE FIVE SHILLINGS, THE MILLWRIGHT AND ENGINEER'S POCKET COMPANION.

Comprising Decimal Arithmetic, Tables of Square and Cube Roots, Practical Geometry, Mensuration, Strength of Materials, Mechanic Powers, Water Wheels, Pumps and Pumping Engines, Steam Engines, Tables of Specific Gravity, &c., &c. To which is added an APPENDIX, containing the Circumferences, Squares, Cubes, and Areas of Circles, Superfices and Solidities of Spheres, &c., &c. Eighth Edition, with Lithographic Illustrations.

"Nearly all the authors I have consulted dress up their rules in the garb of algebraical formula, which, to the majority of plain practical men, is perfectly unintelligible, and Mr. Templeton, by avoiding that system, has made a book more useful to thousands than a whole library of more learned works."—Extract from a letter of an eminent practical Engineer to the Publishers.

"Templeton's Engineer's Companion will be found most useful to all persons connected with machinery. Mr. T. is, we understand, an operative mechanic, and his work has been considerably enlarged by the addition of much valuable matter."—Literary Gazette.

#### PRICE FIVE SHILLINGS.

## THE ENGINEER'S COMMON-PLACE BOOK OF PRACTICAL REFERENCE.

Consisting of Practical Rules and Tables adapted to Land and Marine Steam Engines; to which are added, Square and Cube Roots of Numbers, Areas and Circumferences of Circles, Superfices and Solidities of Spheres, &c., &c.—TRIED EDITION, Improved and Enlarged.

"The author of this little work is already favourably known to the public by his 'Millwright and Engineer's Pooket Companion.' His present book will not sink his credit; it is a useful little work, and displays considerable powers of observation. Several of the rules are new, or such as we have never met with before, and the arrangement is good."—Railway Magazine. "A new work has just issued from the press, entitled 'The Engineer's Common-place Book of Practical Reference,' adapted expressly for the

"A new work has just issued from the press, entitled. 'The Engineer's Common-place Book of Practical Reference,' adapted expressly for the practical mechanic, in which the latest improvements in locomotive and other engines are treated with a conciseness and distinctness rarely to be met with in books of this nature. The work is embellished by four lithographic drawings, and the author is Mr. William Templeton, a fifth edition of whose useful and very successful work, entitled 'The Millwright and Engineer's Pocket Companion,' has just been published."—Dublin Warder.

"Mr Templeton is already well known to practical engineers, and most persons connected with the manufacture or working of machinery, as the author of a very popular and useful work, entitled "The Millwright and Engineer's Pocket Companion,' which has passed through five editions,—no unimportant testimony of its value, or the manner in which it is appreciated by those for whose use it is intended. We have little doubt that the present work will prove no less welcome or valuable to the locomotive machinist and engineer, for whose use it is more particularly designed. Mr. Templeton being himself an engineer of considerable practical experience, his rules and calculations in reference to the censtruction, management, and relative capacity of various descriptions of steam-engines, will be found of great value and extensive application, and being deduced from personal observation and experiments, their accuracy may be relied upon. Some excellent lithographic illustrations are given, with numerous tables, containing the square and solidities of spheres, &c. The work is altogether of a practical character, and such as will find ready acceptance with practical meu."—Midlanda Counties Herald.

### PRICE FOUR SHILLINGS.

## LOCOMOTIVE ENGINE POPULARLY EXPLAINED.

And illustrated by Lithographic Designs; to which are added, Rules and Tables for ascertaining its Amount of Useful Effect, Resistance, &c. Also, interesting Statistical Particulars connected with Bailways, for general information. Second Edition, Revised.

"This small volume gives, in a popular, and, at the same time, a very complete form, a description of the different parts of the machinery of a locomotive steam-engine, and of its modes of application on railways. We seldom meet with a work containing, in so small a compass, so much useful and practical information, as the pages of this volume contain. It is evidently written by a gentleman well acquainted with the subject on which he treats. and from his practical knowledge he is enabled to supply details and calculations that can be relied on in practice. The object of the publication, as stated in the preface, is to present, in a popular form, and in a shape accessible to all classes, a description of the locomotive steam-engine, so that those who desire to acquire such information may be able to attain it without being debarred by the expense of the larger works on the subject. It is offered as the result of several years' experience in the locomotive department on a line of railway on which the author had constant opportunities of testing the merits and defects of the engines, and of their working on the railway; and the results of his experience are here compressed within one hundred pages."-Inventors' Advocate.

"The rapid improvement and extensive use of the locomotive engine renders a popular treatise like the one before us a great desideratum. The author has admirably supplied the deficiency in a cheap little work, clear and perspicuous in its descriptions, correct in its theories, and calculated to be exceedingly useful to the artizans employed in the construction and use of this great leviathan in mechanics. Every person employed in the manufacture of locomotive engines ought to possess it, and the directors of every line of railway in the kingdom would confer a benefit on the public by putting a copy of it in the hands of each of their stokers and engine-drivers."—
The Leeds Times.

"A mass of information respecting the locomotive engine and railways, and supplying much useful matter as regards both, with lithographic prints to illustrate the text. We may, in the old terms of commendation, say, that this little volume makes the subject readily intelligible to the meanest capacities."—Literary Gazette.

London: Published by Simpkin, Marshall, and Co., and sold by Smith, Rogerson, and Co., Liverpool, and by all Bocksellers.







.

. .

•

٠.

.

•

